

AIRMAN

INSTRUCTION MANUAL **ENGINE GENERATOR**

SDG125S-3A6
SDG150S-3A6
SDG150AS-3A6

(DUAL VOLTAGE TYPE)



**Please be sure to read this manual
before using this machine.**

HOKUETSU INDUSTRIES CO., LTD.

Preface

Thank you for having selected our "AIRMAN" product.

- ◆ This manual explains about the proper operation and daily inspection and maintenance of this machine.
- ◆ In order to use a machine safely, people with sufficient knowledge and sufficient technology need to deal with it.
- ◆ Before operating the machine, read the manual carefully, fully understand its operation and maintenance requirement. Maintain "SAFETY OPERATION AND PROPER MAINTENANCE OF THE MACHINE".

Be sure to follow safety warnings and cautions given in the manual.
Unsafe operation could cause serious injury or death.

- ◆ For details of handling, maintenance and safety of the engine, see the Engine Operation Manual.
- ◆ Keep the manual available at all times for the operator or safety supervisor.
- ◆ When this manual is missing or damaged, order it from our office nearby or distributor.
- ◆ Be sure that the manual is included with the machine when it is handed over to another user.
- ◆ There may be some inconsistency in detail between the manual and the actual machine due to improvements of the machine. When you have anything unclear or you want to advise us, contact our office nearby or distributor.
- ◆ If you have any questions about the machine, please inform us the model and serial number. A plate stamped with the model and serial number is attached to side of the machine.

ENGINE GENERATOR	
MODEL	<input type="text"/>
SER. NO.	<input type="text"/>
GEN. OUTPUT	<input type="text"/> kVA
VOLTAGE	<input type="text"/> V
FREQUENCY	<input type="text"/> Hz
POWER FACTOR	80% PHASE 3
RULE	JEM 1398
NET DRY MASS	<input type="text"/> kg
OPERATING MASS	<input type="text"/> kg
HOKUETSU INDUSTRIES CO., LTD.	
MADE IN JAPAN	

A040491

- ◆ Each illustrated figure (Fig.) has a number (for instance, A040491) at the right bottom. This number is not a part number, but it is used only for our reference number.


Table of Contents

1. Safety	1-1
1.1 Caution before Operation	1-2
1.2 Caution during Operation	1-4
1.3 Caution during Inspection and Maintenance	1-6
1.4 Safety Warning Labels	1-8
2. Part Names	2-1
2.1 Unit Appearance and Part Names	2-1
2.2 Internal Components	2-4
3. Installation	3-1
3.1 Transporting Unit	3-1
3.2 Conditions of Unit Installation	3-2
3.3 Leakage Protection Device and Grounding Method	3-5
3.4 Selecting Cable	3-7
3.5 Selector Valve of Fuel Pipe	3-8
4. Operation	4-1
4.1 Instrument panel	4-1
4.2 Protection device	4-2
4.3 Check Frequency Selection Switch for AVR	4-4
4.4 How To Switch Voltages	4-5
4.5 Connecting Load	4-6
4.6 Engine Oil • Coolant • Fuel	4-11
4.7 Check before Starting the Machine	4-12
4.8 Operation and Stopping	4-15
4.9 Parallel Operation	4-19
5. Periodic Inspection/Maintenance	5-1
5.1 Important items at Periodic inspection and Maintenance or after Maintenance	5-1
5.2 Daily Inspection and keeping Operation Log	5-2
5.3 Periodic Replacement of Parts	5-2
5.4 Periodic Inspection List	5-3
5.5 Maintenance	5-4
5.6 Periodical Load Test to be Performed	5-11
6. Maintenance/Adjustment	6-1
6.1 Maintenance of Battery	6-1
6.2 Troubleshooting	6-3
7. Storage of the Unit	7-1
7.1 Preparation for Long-term Storage	7-1
8. Specifications	8-1
8.1 Specifications	8-1
8.2 Outline drawing	8-3
9. Wiring Diagram	9-1
9.1 Generator Wiring Diagram	9-1
9.2 Engine Wiring Diagram	9-2

1.Safety

This manual explains and illustrates general requirements for safety and cautions for safety.

Please read these safety requirements carefully and fully understand the contents before starting the machine.

For your better recognition, according to the degree of potential danger, safety messages are classified into three hierarchical categories, namely, "DANGER", "WARNING" and "CAUTION" with a caution symbol -attached to each message.

When one of these messages is found, please take preventive measures for safety to carry out "SAFETY OPERATION AND PROPER MAINTENANCE OF THE MACHINE".



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



IMPORTANT indicates important caution messages for the performance or durability of the machine, which has no concern to injury or accident of or to a human body.

Follow warnings mentioned in this manual. This instruction manual does not describe all safety items. We, therefore, advise you to pay special attention to all items (even though they may not be described in the manual) for your safety.


1.Safety

1.1 Caution before Operation

WARNING

Follow the safety instructions


- Read each instruction plate which is displayed in the manual or on the machine carefully, understand its content and follow the indications thereof.
- Keep the Safety Warning labels clean. When they are damaged or missing, apply new ones.
- Do not modify the machine without prior approval. The safety may be compromised, functions may be deteriorated, or machine life may be shortened.
- Never use the machine for the other purposes than power supply. Otherwise, serious accidents may occur.

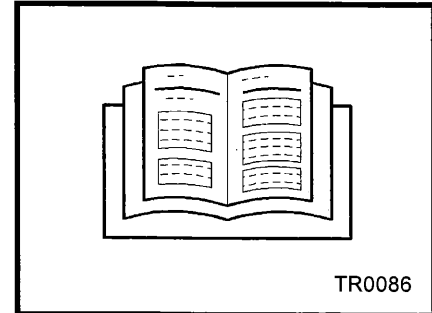

WARNING

Ventilation


- Exhaust gas from the engine is poisonous, and could cause casualties when it is inhaled.
Avoid using the machine in an insufficiently ventilated building or a tunnel.

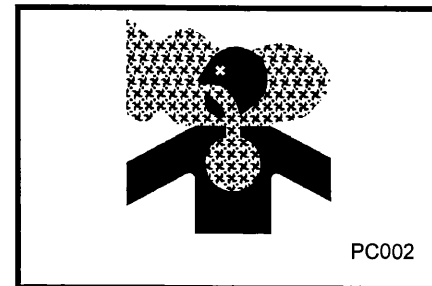

WARNING

Handling battery

- Keep flames away from battery.
Battery may generate hydrogen gas and may explode.
- Battery electrolyte is dilute sulfuric acid.
In case of mishandling, it could cause skin burning.
- Wear protective gloves and safety glasses when handling a battery.
- Dispose of battery, observing local regulations.

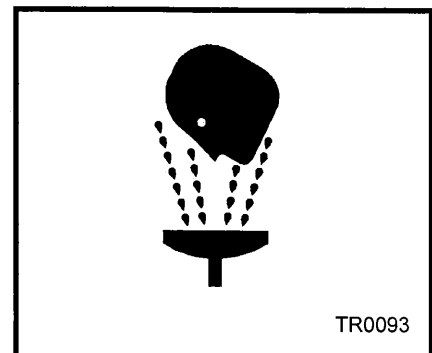

1.Safety

CAUTION

- When handling machine, do not wear;
- loose clothes
- clothes with unbuttoned sleeves
- hanging tie or scarf
- dangling jewelry
- Such outfit could be caught in the machine or dragged in the rotating portion of the machine, and could cause a serious injury.

Safety outfit



CAUTION


Maintain both physical and mental health

- Do not operate the machine when you are tired or drunk or under the influence of drugs. Otherwise, a hasty conclusion or careless handling may cause unexpected injury or accident. Manage your physical and mental health and be cautious in handling the machine.

CAUTION

- Please wear protection implements, such as a helmet, protection glasses, earplugs, safety shoes, a glove, and a protection-against-dust mask, according to the contents of work for safety.


Protection equipments

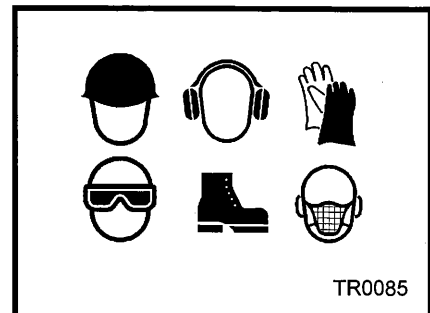

CAUTION

- Have first-aid boxes and fire-extinguishers near the machine ready for emergency situations such as injuries and a fire.
- It is advisable to have a list of phone numbers of doctors, ambulance and the fire department available in case of emergency.

Safety fittings

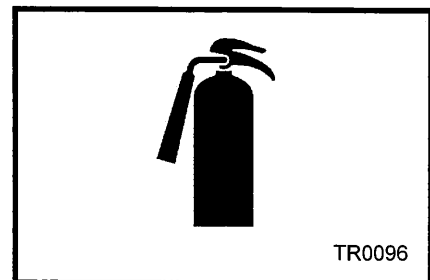

CAUTION

Safety around the machine

- Such things as unnecessary equipment and tools, cables, hoods, canvas sheets and pieces of wood which are a hindrance to the job, have to be cleared and removed. This is because operators and personnel nearby may stumble on them and may be injured.

1.Safety

1.2 Caution during Operation

WARNING

Never touch the output terminals and interior of control board


- Touching to the output terminals and the control board might cause electric shock so please don't open the cover of output terminal board during the operation of the machine. (There is hundreds volt at the output terminals.)
When it is unavoidable to open the door of machine, please don't touch the rotating parts and hot parts. Touching of those parts might cause scalding and serious injury.
- When removing or connecting a connecting cable for changing load, be sure to switch OFF the circuit breaker, remove the starter key from the starter switch, then carry out a work. The operator must keep the key during operation. Neglecting the cautions mentioned above, and a third party starting the machine during operation may cause serious accidents such as electric shock.



WARNING

Hands off from rotating parts and belts


- Keep hands off from the rotating portion or belts while running. It could cause serious injuries if hands should be caught in.

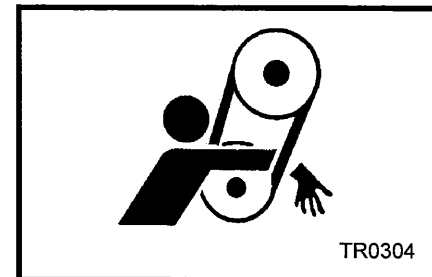

CAUTION

Do not remove radiator cap during operation

- Do not, under any circumstance, open the radiator cap while running or immediately after stopping operation. Otherwise high temperature steam jets out and this could cause scalding.

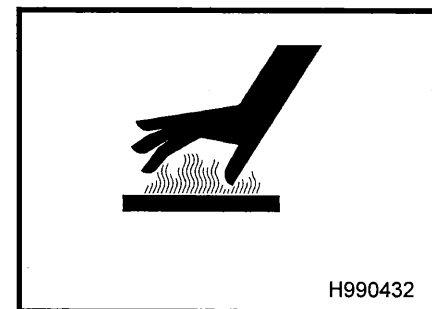

1.Safety

CAUTION

- Never work nearby hot portions of the machine while it is running.
- Do not touch hot portions of the machine while inspecting the machine when running.
- Such parts as engine, exhaust manifold, exhaust pipe, muffler, and radiator are especially hot, so never touch those parts, because it could cause scalding.
- Coolant water and engine oil are also very hot and dangerous to touch. Avoid checking or refilling them while the machine is running.

Do not touch hot parts



H990432

CAUTION

- Do not, under any circumstance, bring lit cigarettes or matches near such oils as diesel fuel oil, and engine oil, etc. They are extremely flammable and dangerous, so be careful when handling.
- Refilling oils should be done in an outdoor well-ventilated place.
- Refuel after stopping the engine, and never leave the fuel nearby the machine. Do not spill. It may cause a fire. When it is spilt, wipe it up completely.
- **Do not fill fuel oil up to the cap level. When fuel tank is filled up to the cap level, fuel oil will be overfilled due to volume expansion caused by rise of ambient temperature. Further, fuel will be possibly spilled from fuel tank due to vibration caused during movement and/or transportation of machine.**
- Such parts as muffler and exhaust pipe can be extremely hot. Remove twigs, dried leaves, dried grass and waste paper, etc. from the exhaust outlet of the muffler.
- Keep a fire extinguisher available by the machine in case of unexpected fire.

Fire prevention



D004



H990433


1.Safety

1.3 Caution during Inspection and Maintenance

WARNING

Hang a "Now Checking and under Maintenance" tag


- Before starting inspection, switch off the circuit breaker of this machine, remove the starter key from the starter switch, and then hang a "Now Checking and under Maintenance" tag where it can be easily seen. The checker must keep the key during checking and maintenance.
- Remove the negative (-) side cable from the battery. If the above procedure is neglected, and another person starts operating the machine during check or maintenance, it could cause serious injury.

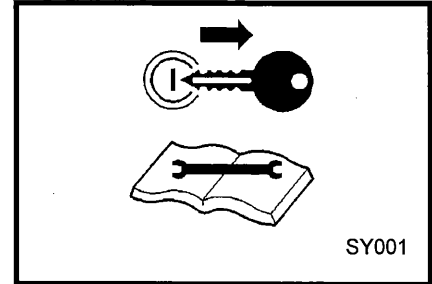

WARNING

Adjusting tension of belt


- Be sure to stop the engine and remove the starter key whenever the tension of the belt is to be adjusted.
- If the machine is running, it might catch the operator's hand into the belts, and this could cause a serious injury.

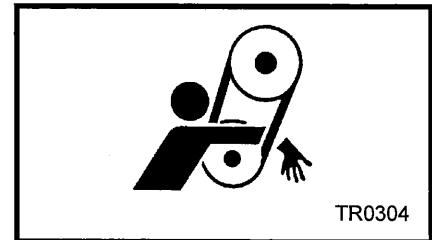

WARNING

Hands off from cooling fan

- Be sure to stop the engine and remove the starter key whenever the tension of the belt is to be adjusted.
- If the machine is running, it might catch the operator's hand into the belts, and this could cause a serious injury.

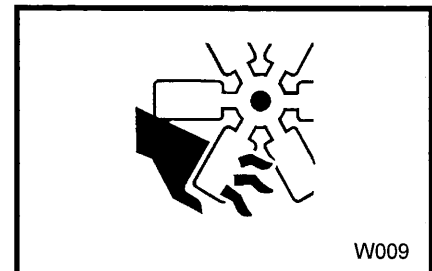

WARNING

Cleaning by air-blow

- When cleaning dust accumulated in such devices as the air-filter, etc., by blowing compressed air, wear safety glasses, etc. to protect your eyes.




1.Safety

CAUTION

- It is recommended to use a lamp with safety guard fitted where the site is dark. Operating the machine gropingly or by relying on one's intuition could cause unexpected accidents. Any lamps without safety guard are not recommended since they can be broken and they could ignite flammables such as fuel, etc.

Lighting apparatus

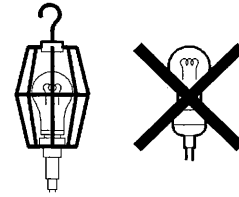


TR0206

CAUTION

- Be sure to stop the engine, and let the coolant water sufficiently cool down before draining it.
- If the drain valve is opened before the coolant water is cooled enough, hot water could jet out, and it could cause scalding.

Opening coolant water drain valve

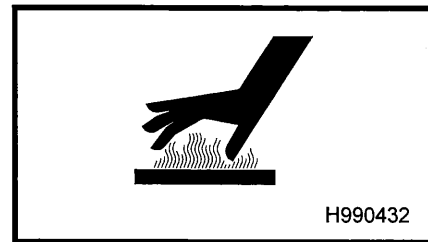


H990432

CAUTION

- After stopping the engine, wait 10 to 20 minutes until the engine oil cools off. Then check the level of the engine oil, or refill or drain the oil.
- The engine oil is very hot during operation and just after it stops. Be careful because the hot oil also pressurized blows off and it can cause burning.

Refilling or draining of engine oil

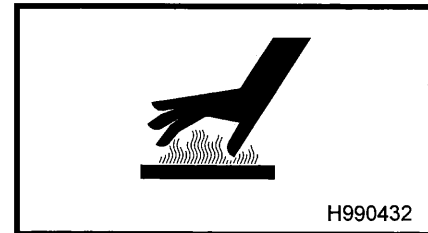

H990432

CAUTION


- When washing the machine, cover the control panel, generator and its electric parts to prevent them from being exposed to splashing water and avoid possible decrease in electrical insulation or other troubles to the machine.
- Dust, sand and dirt accumulated inside control panel could cause malfunction or trouble of the instruments. Clean them by blowing compressed air.

Caution of the cleaning

CAUTION

- Waste liquid from the machine contains harmful material. Do not discharge it onto the ground or into the river, lake or sea. Such material will pollute the environment.
- Be sure to use a container to hold the waste liquid from the machine.
- Be sure to follow the designated regulations when disposing of oil, fuel, coolant (antifreeze), filter, battery or other harmful materials.

Treatment of organic wastes

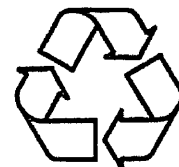

A100285


1. Safety

1.4 Safety Warning Labels

Following labels are attached to the machine.

Keep them clean at all times. If they are damaged or missing, immediately place an order with your nearest dealer for replacement. Part numbers are indicated on the lower right corner of the label.


Adhere a new one to the original location.

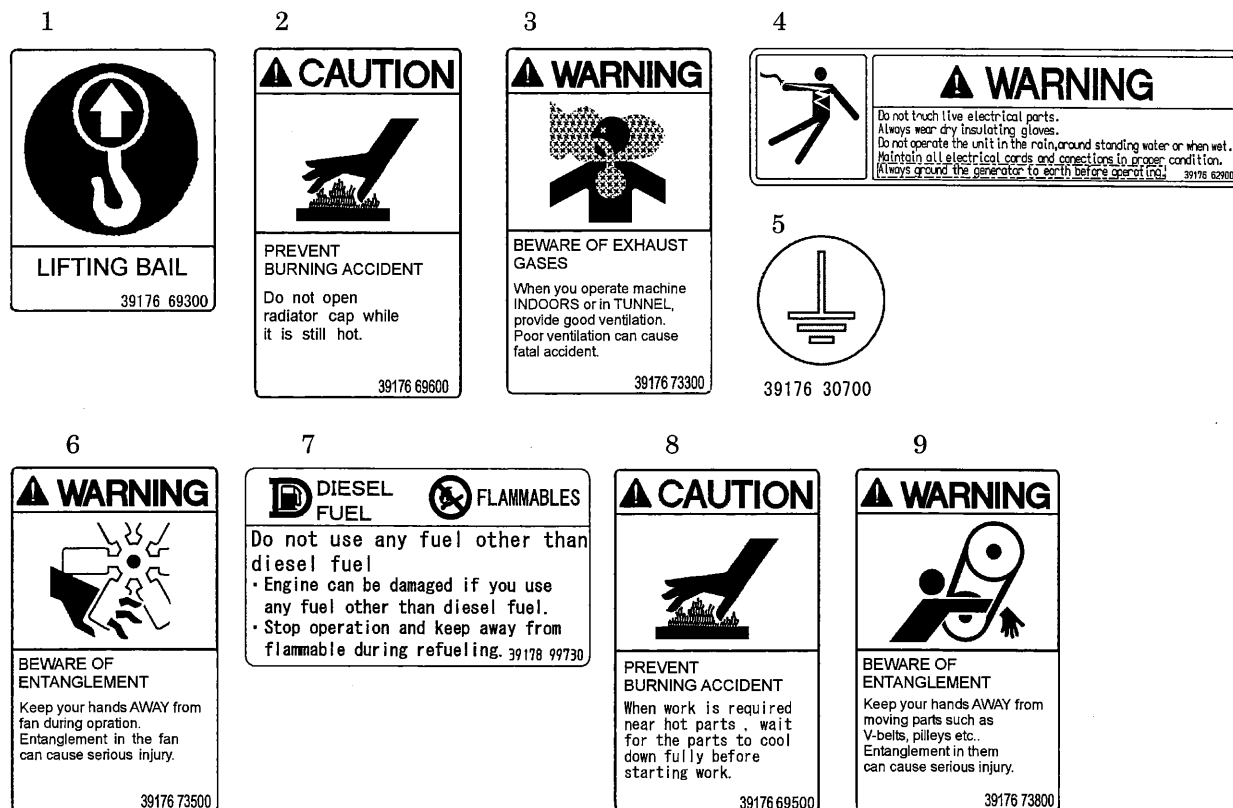

1.Safety

SUPER SILENT (SDG125S-3A6)


- The pasting position of safe warning label is as follows.

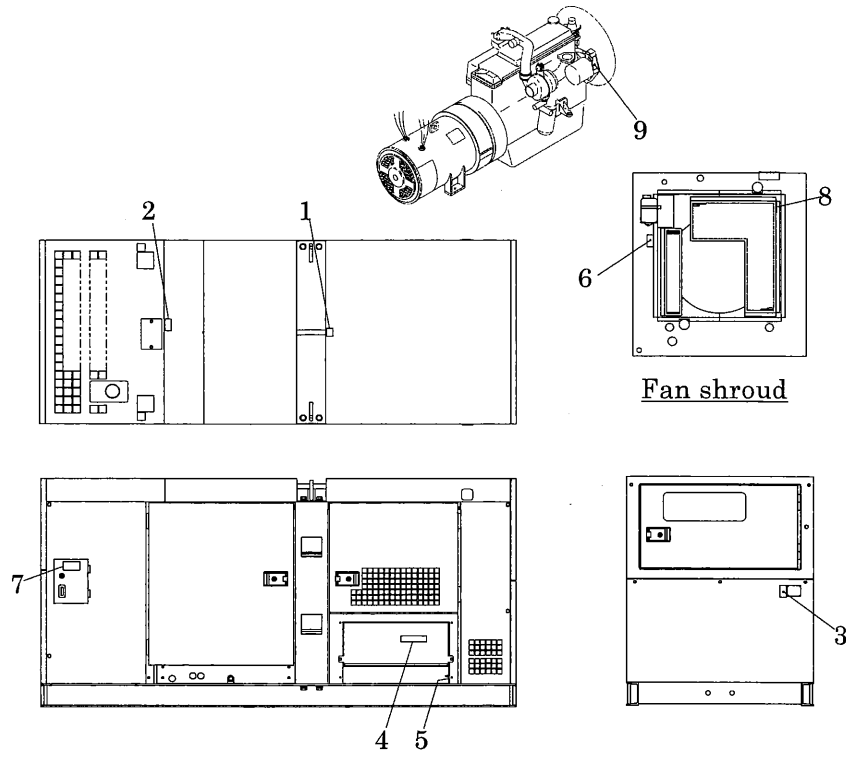

A150165E

SUPER SILENT (SDG150S-3A6)

- The pasting position of safe warning label is as follows.


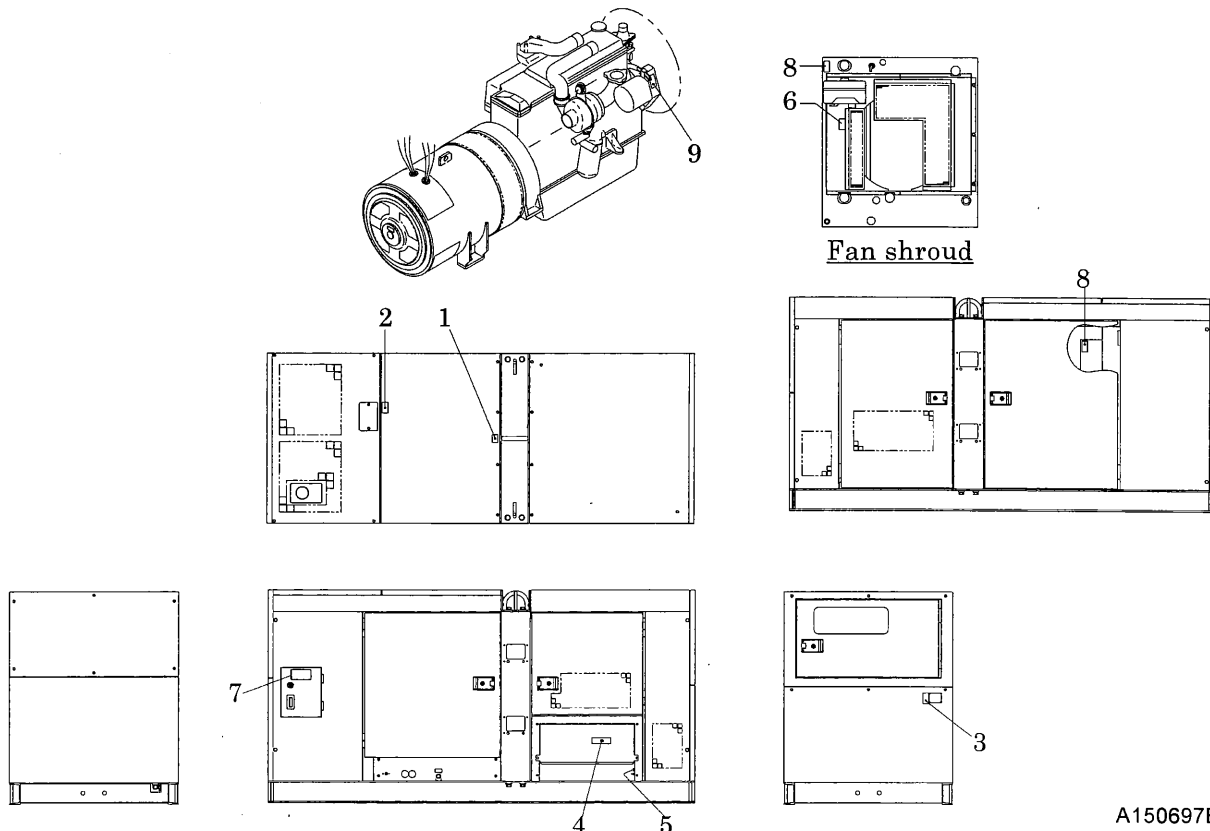


A150697E






1.Safety

ULTRA SUPER SILENT (SDG150AS-3A6)

- The pasting position of safe warning label is as follows.

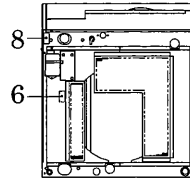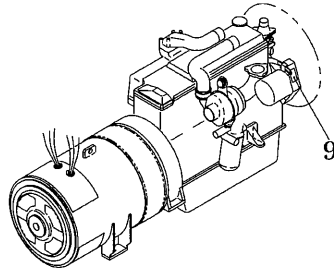

Fan shroud

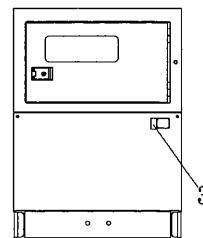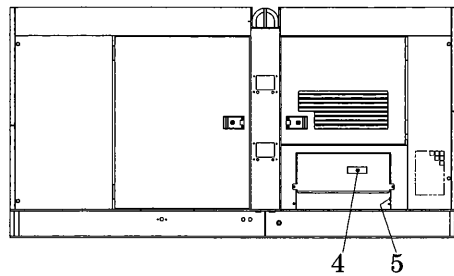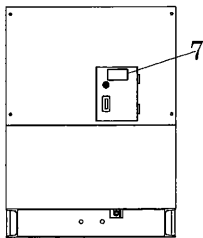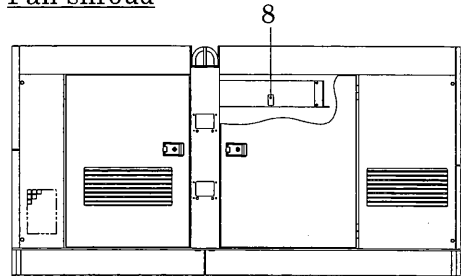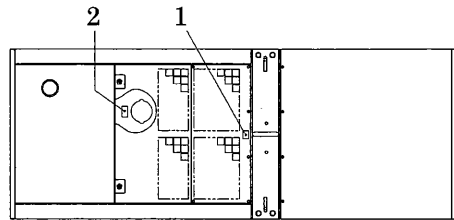


A150705E

2. Part Names


2.1 Unit Appearance and Part Names

SUPER SILENT (SDG125S-3A6)

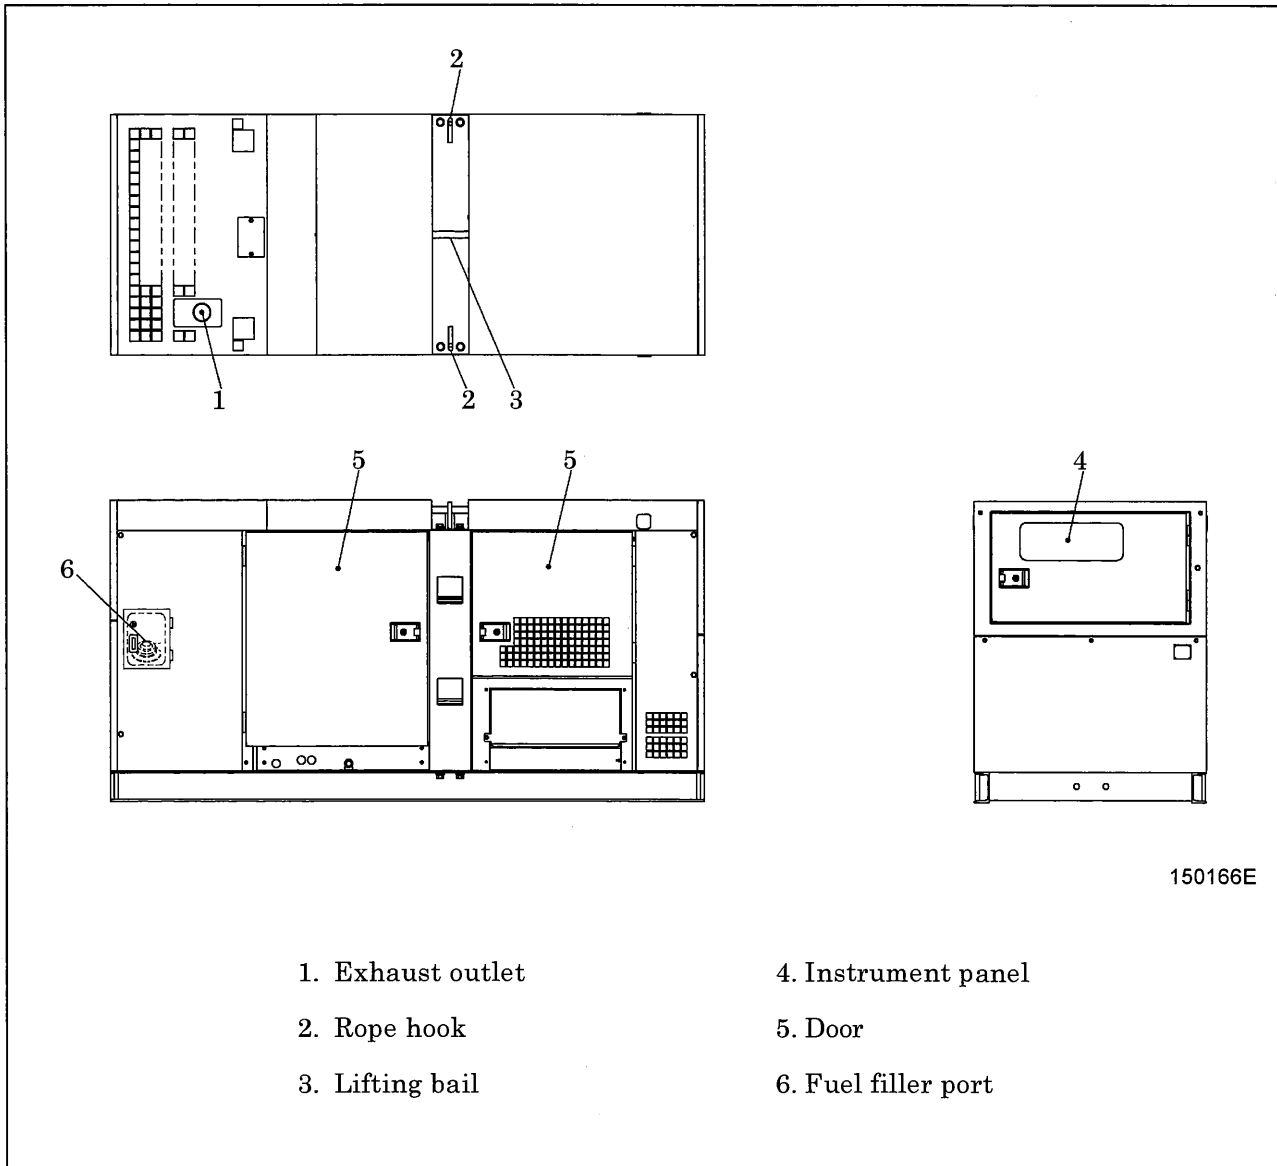

2. Part Names


SUPER SILENT (SDG150S-3A6)

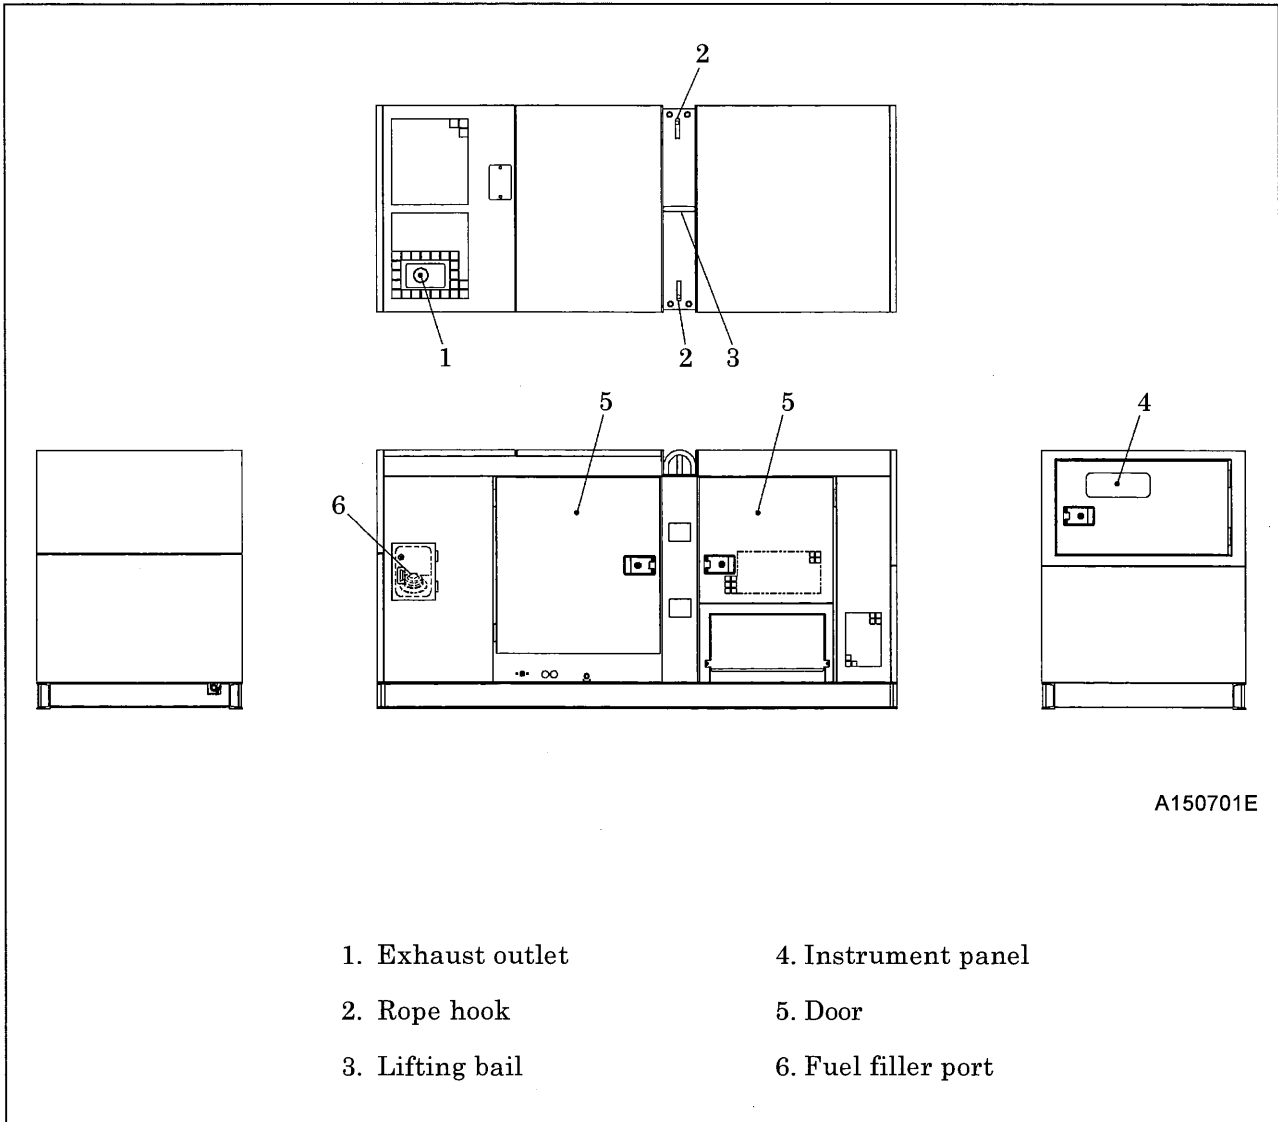

A150701E

2. Part Names


ULTRA SUPER SILENT (SDG150AS-3A6)

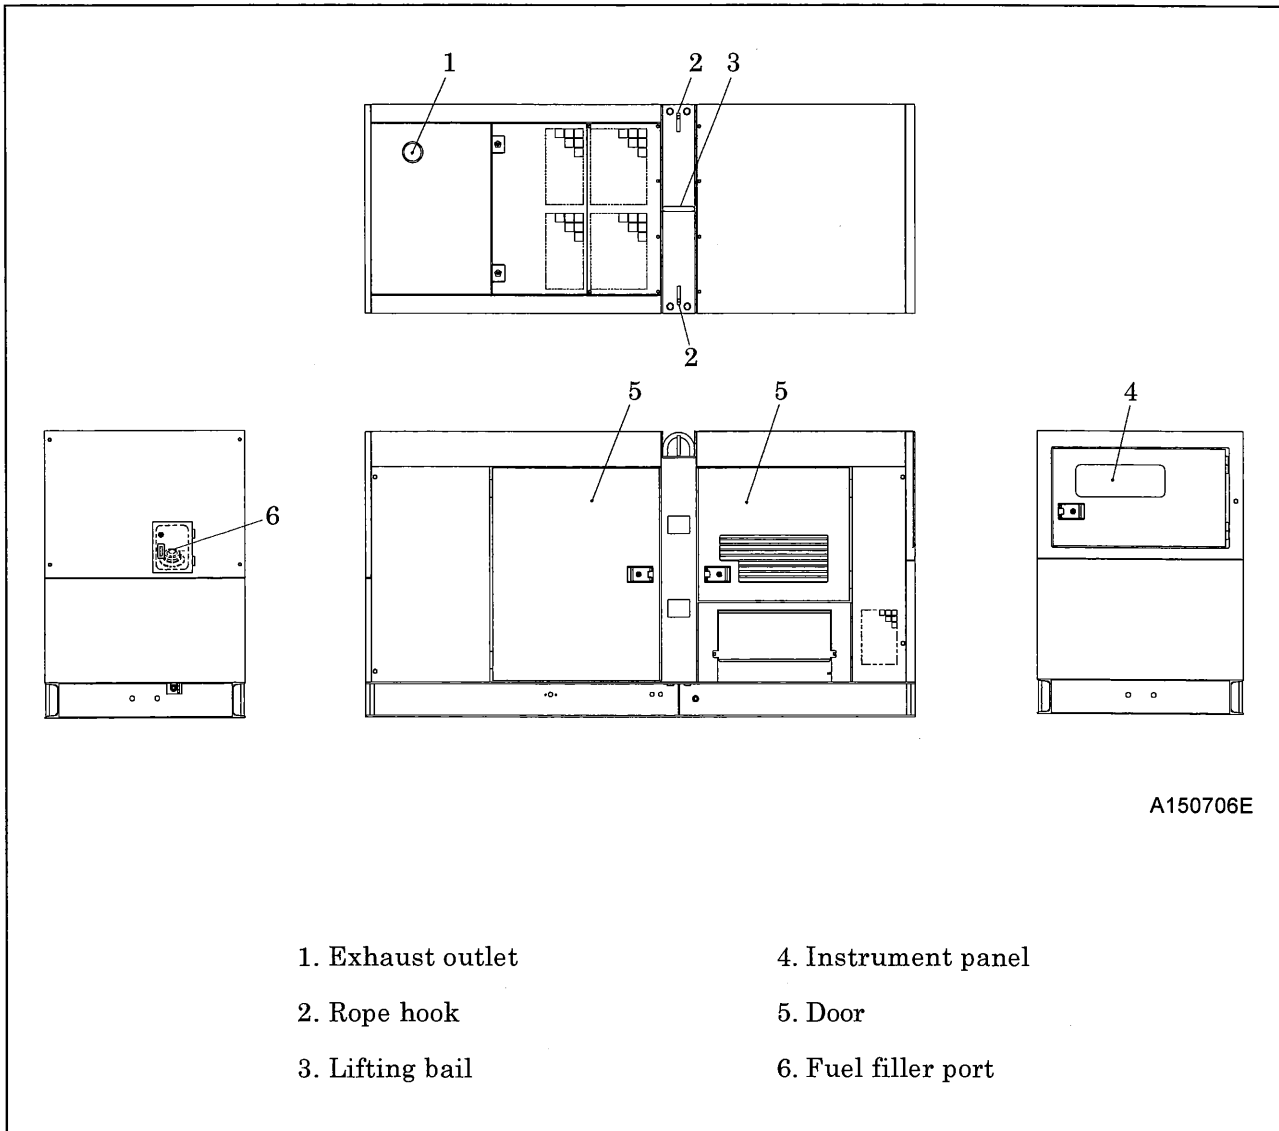

2. Part Names

2.2 Internal Components

SUPER SILENT (SDG125S-3A6)

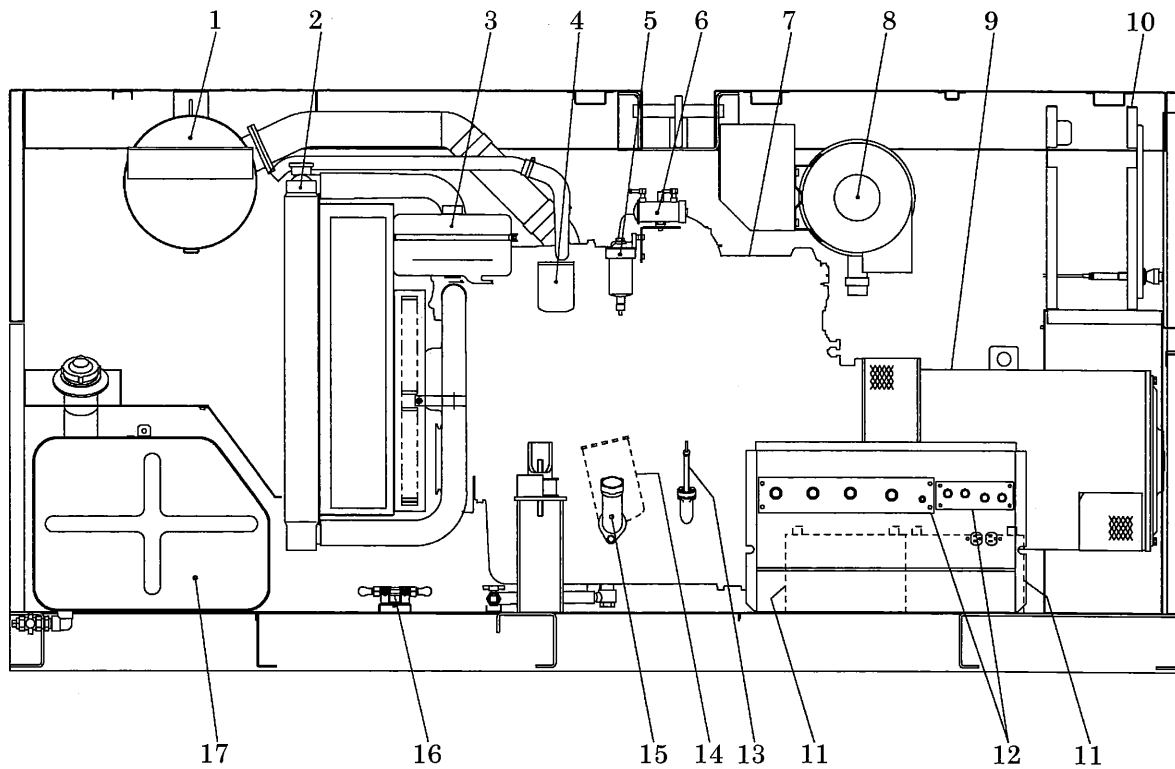


A150167

- | | |
|---|--|
| 1. Exhaust muffler | 10. Control panel |
| 2. Radiator | 11. Battery |
| 3. Reserve tank | 12. Output terminals |
| 4. Fuel filter | 13. Engine oil level gauge |
| 5. Sedimentor | 14. Engine oil filter |
| 6. Fuel air-bleeding electromagnetic pump | 15. Engine oil filler port |
| 7. Engine | 16. Selector valve of fuel pipe |
| 8. Air filter | 17. Fuel tank |
| 9. Generator main unit | ※ Both devices 11 & 14 are provided on
the other side of operation panel side |

2. Part Names

SUPER SILENT (SDG150S-3A6)

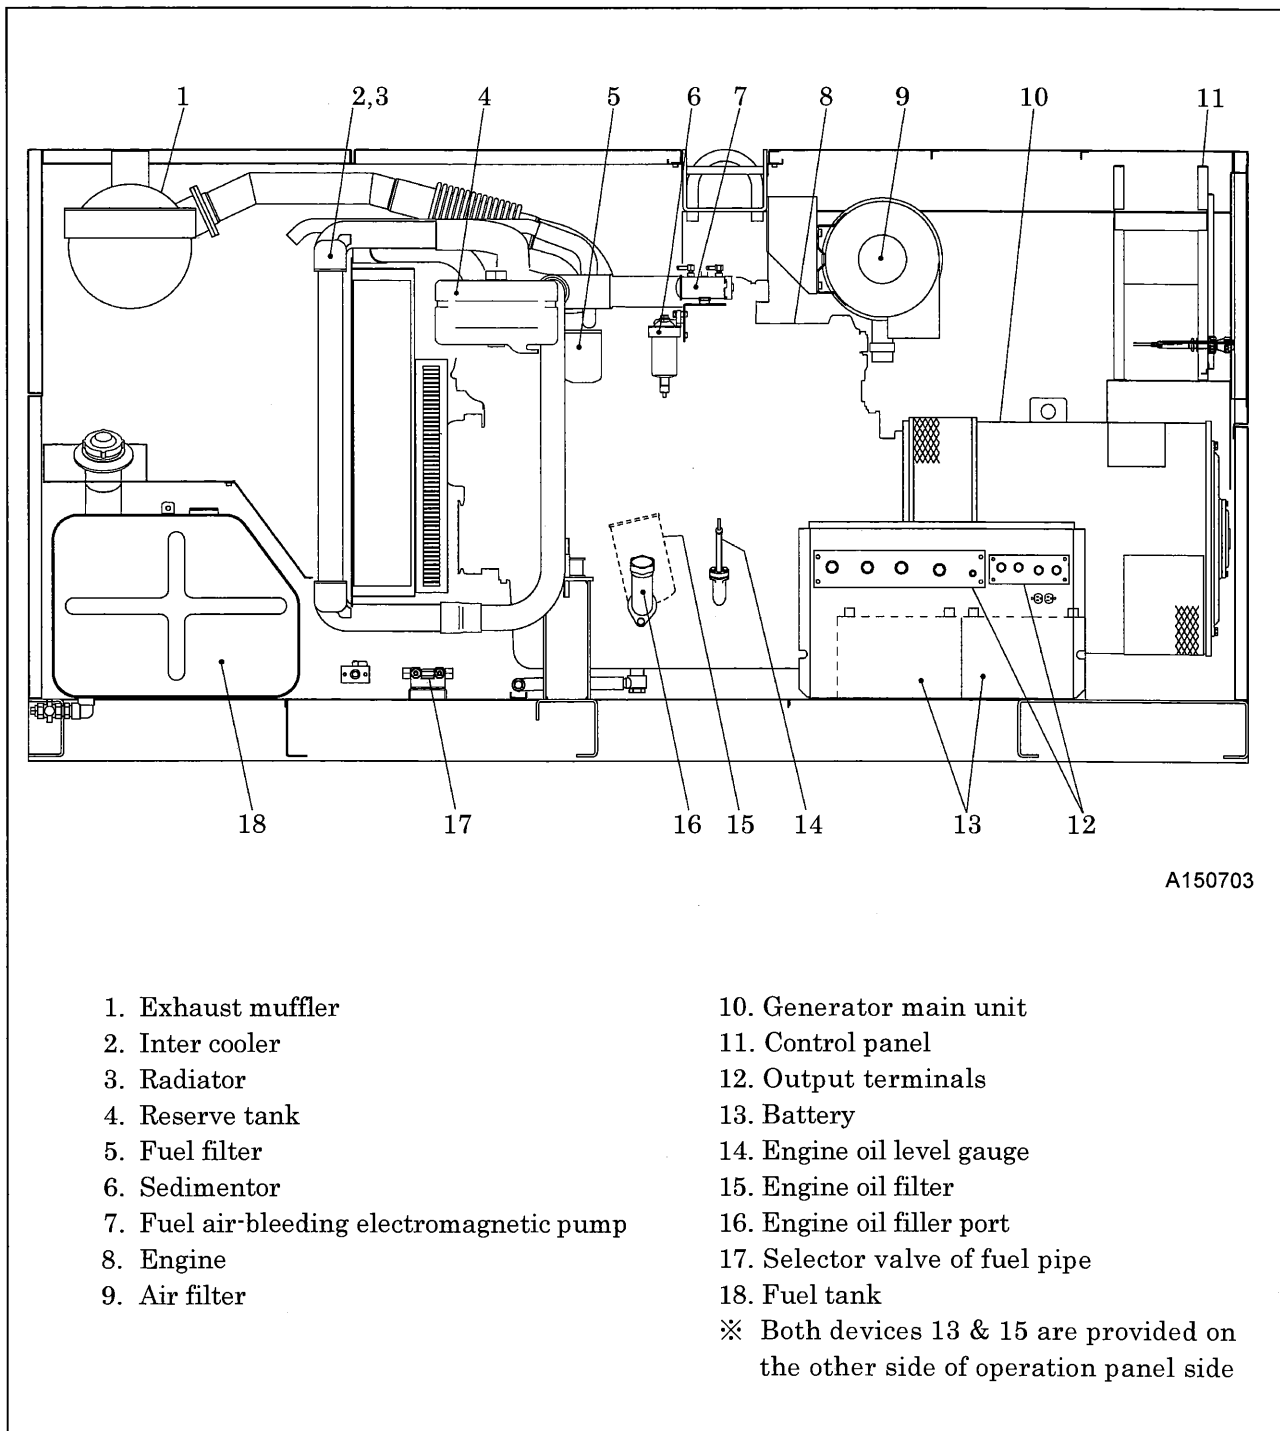


1. Exhaust muffler
2. Inter cooler
3. Radiator
4. Reserve tank
5. Fuel filter
6. Sedimentor
7. Fuel air-bleeding electromagnetic pump
8. Engine
9. Air filter

10. Generator main unit
11. Control panel
12. Output terminals
13. Battery
14. Engine oil level gauge
15. Engine oil filter
16. Engine oil filler port
17. Selector valve of fuel pipe
18. Fuel tank

※ Both devices 13 & 15 are provided on the other side of operation panel side

2. Part Names

ULTRA SUPER SILENT (SDG150AS-3A6)

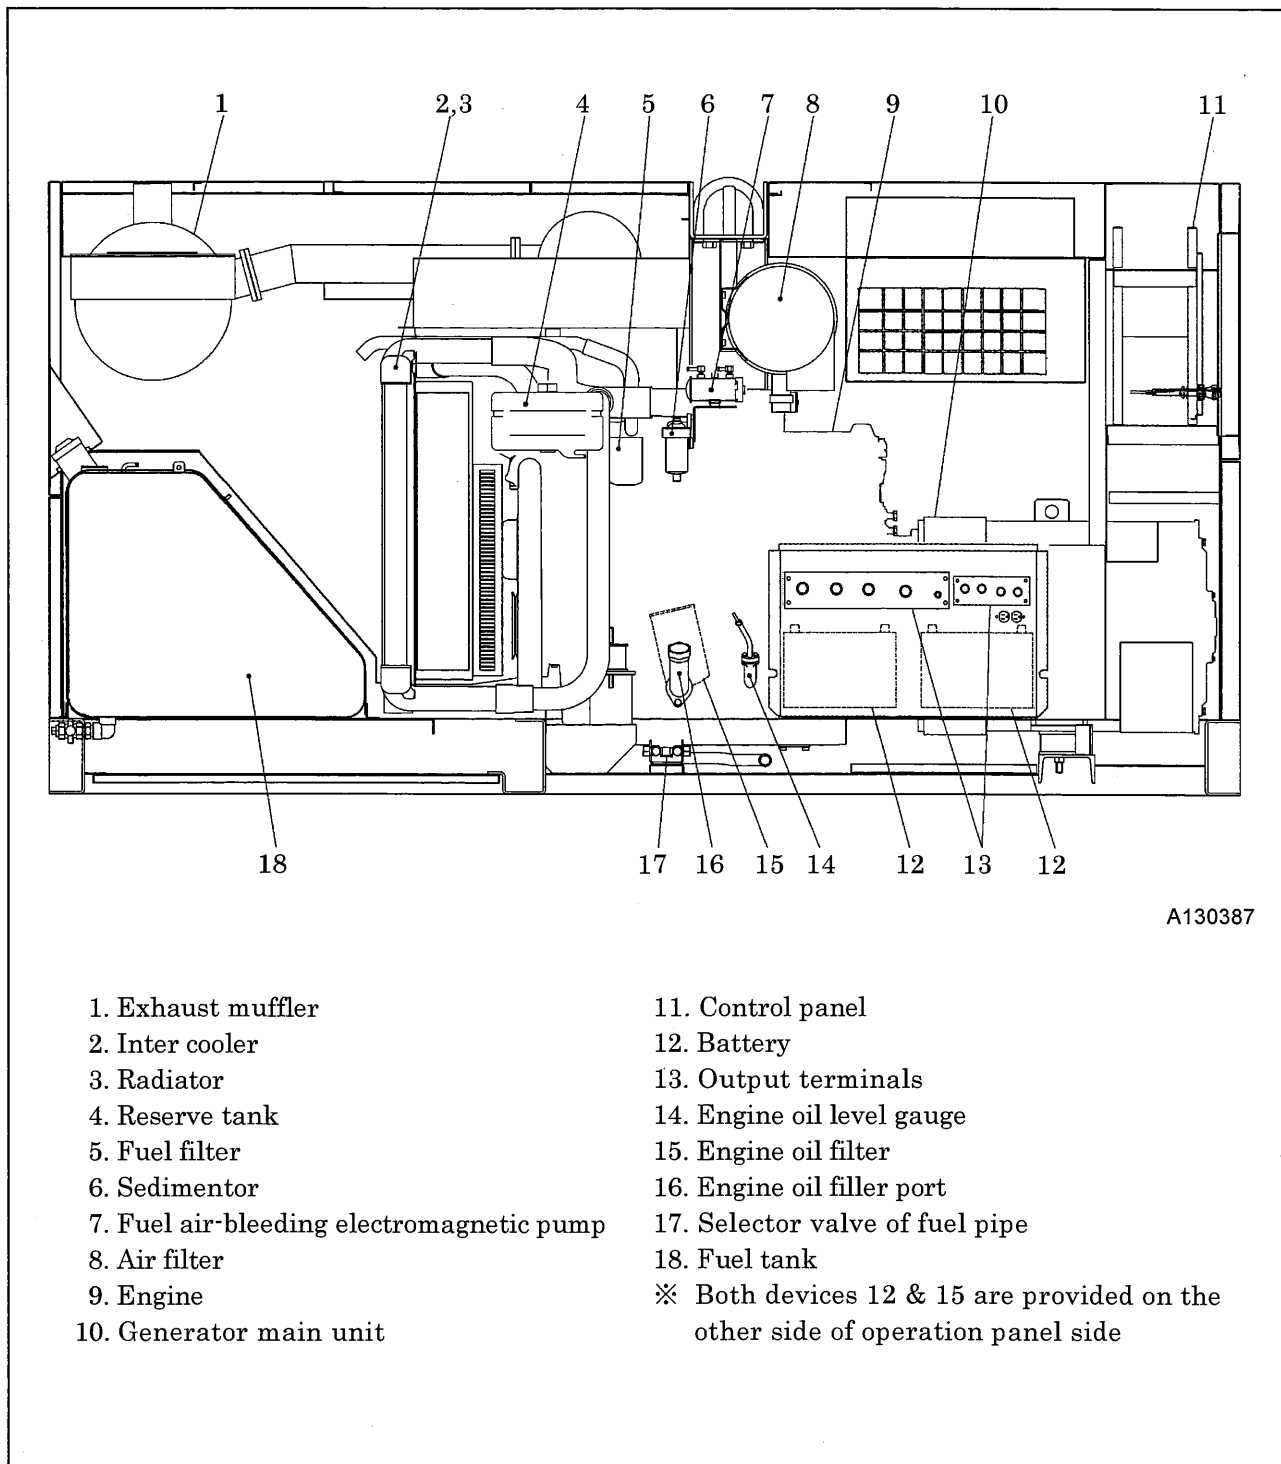

A130387

- | | |
|---|---|
| 1. Exhaust muffler | 11. Control panel |
| 2. Inter cooler | 12. Battery |
| 3. Radiator | 13. Output terminals |
| 4. Reserve tank | 14. Engine oil level gauge |
| 5. Fuel filter | 15. Engine oil filter |
| 6. Sedimentor | 16. Engine oil filler port |
| 7. Fuel air-bleeding electromagnetic pump | 17. Selector valve of fuel pipe |
| 8. Air filter | 18. Fuel tank |
| 9. Engine | ※ Both devices 12 & 15 are provided on the other side of operation panel side |
| 10. Generator main unit | |

3. Installation


3.1 Transporting Unit



WARNING


Transportation

- Use the lifting bail “1” at the center of bonnet for hoisting up and down the machine.
- When transporting the machine, be sure to put it on the truck bed and use the rope hooks “2” to secure it with rope
- Do not hoist up the machine while it is running. Otherwise, a fatal trouble or serious accident may occur.

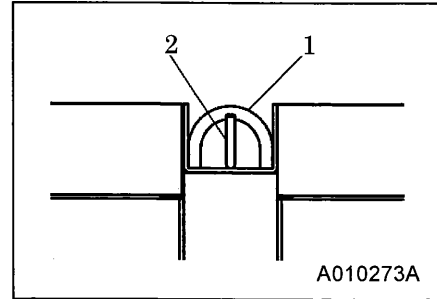


3.1.1 Lifting

- Use the lifting bail “1” fitted on center of bonnet.
- Select an appropriate crane or truck by referring to the mass and dimensions mentioned in “Specifications”.
- Only a qualified crane operator is allowed to operate a crane.

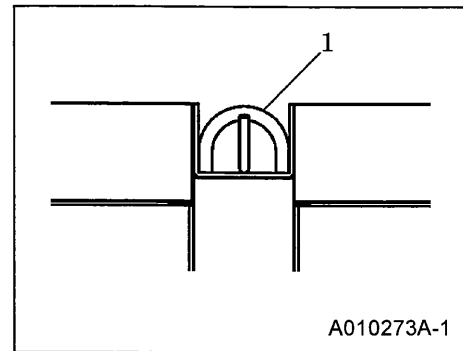

3.1.2 Securing a machine on truck bed when transporting

- When moving or transporting a machine from site, place it on truck bed and fasten it by ropes “3” at two hooks “2” on both right and left sides and “4” points on the common frame.

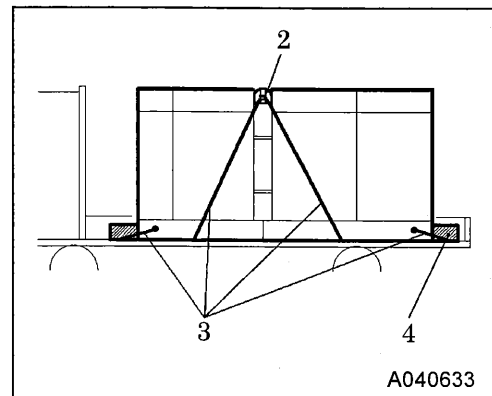


3. Installation

3.2 Conditions of Unit Installation

⚠ WARNING

Ventilation


- Exhaust gas from the engine is poisonous, and it could cause casualties when it is inhaled.
Never use the machine in such insufficiently ventilated buildings and inside tunnels. When the machine is unavoidably used in such insufficiently ventilated place, ventilation devices and ventilation pipe should be provided for better ventilation.

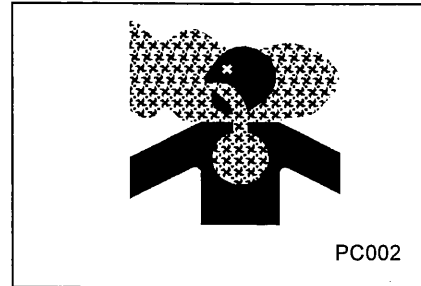

⚠ WARNING

In case that the unit is installed indoors

- When installing the machine indoors, make sure to provide air intake port and outlet port for better and sufficient ventilation.
- Both air-intake port and exhaust port should be enough large to prevent engine water overheating.
- Make sure to send out engine exhaust gas and exhaust air of radiator to the atmosphere.
- All exhaust pipes should be led outside and no leak from the connection between the pipes should not exist.
- Blow-by gas should be exhausted outdoors.

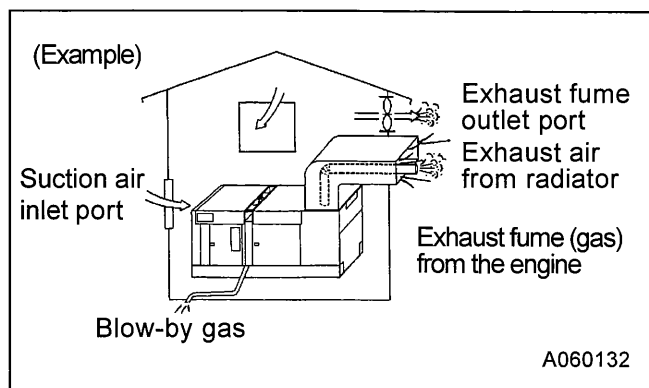


(Note) When blow-by gas is exhausted indoors, oily air could cause clogging to the radiator.)

⚠ WARNING

Installing the unit in such poorly-ventilated place

- When installing the machine indoor in poorly ventilated places, make sure to ventilate them, supplying fresh air and ventilate them.
- In this case, make sure to extend the exhaust fume pipe outdoors, and also make sure to prevent any leak from any connection pipes. In case that the unit is operated under exhaust air pressure, make sure to install the exhaust pipe to be supported.

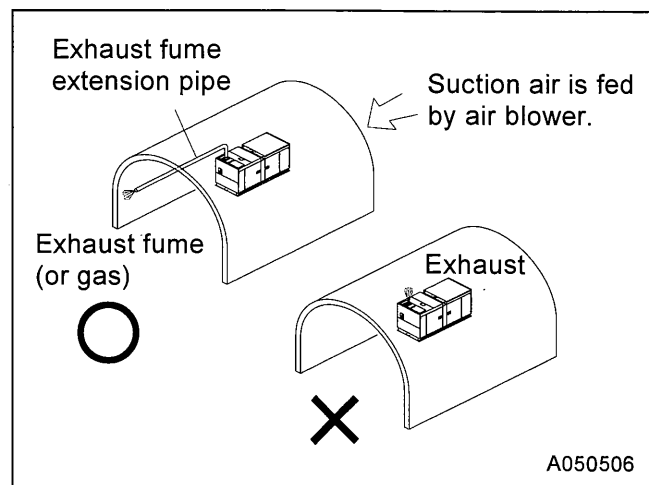


3. Installation

WARNING

How to locate the unit


- Never locate the unit with the exhaust muffler facing any private house:
- As the exhaust fume (gas) from the engine is poisonous, never direct it to any other persons passing by.

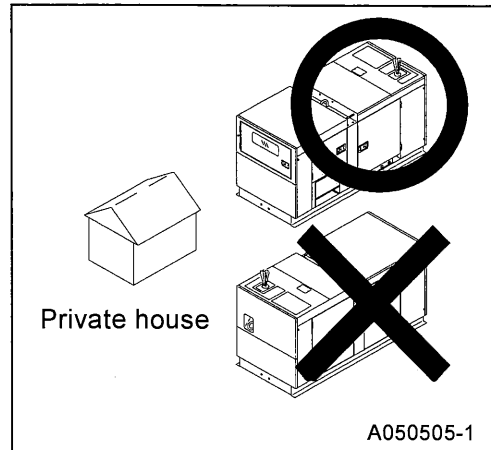


WARNING

Installation

- The machine has to be installed on dry, firm, and level area.
- The machine should be installed within 5° degree inclination.
- Avoid installing the machine in a place such as a damp place or a place where puddles are apt to be formed after rain. Such installation could cause electric shock.
- When installing the machine at the sea shore or on a ship, make sure that the machine should not be exposed directly to sea water.
- When installing the machine at a sandy place, make sure that exhaust from the generator or radiator does not blow the sand up in the air, or into the machine.
- In case that the unit has to be installed inevitably on any rough and uneven ground; it is necessary to insert square wooden bars under the unit for levelling it.

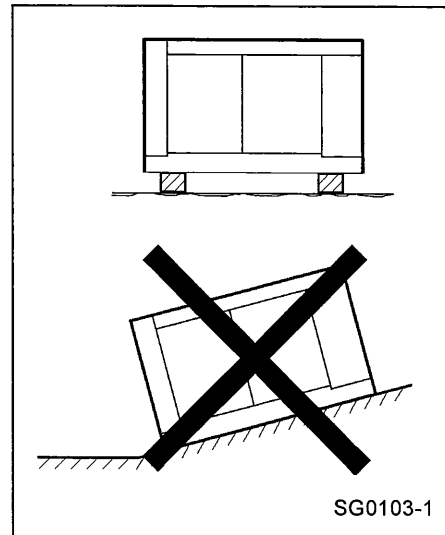

- The machine should be operated in following conditions:
- Ambient temperature - 15°C to +40°C
- Humidity Less than 85%
- Altitude Lower than 1,000 m above sea level
- If more than two machines are placed parallel in operation, keep enough distance so that exhaust air from one machine does not effect the other one.
- Keep enough space around the machine for inspection and maintenance access.

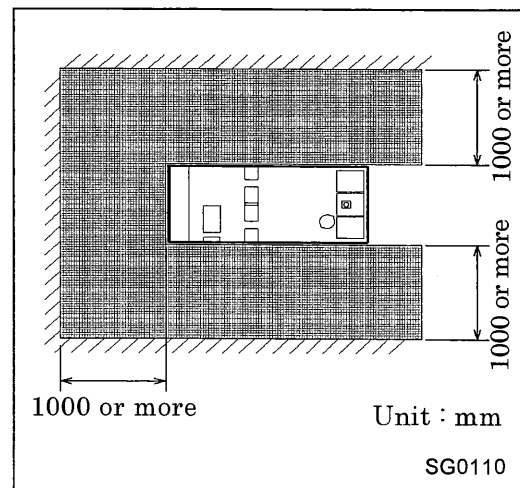


3. Installation

 **CAUTION**

Preparation of safety fences

- In order to prevent from entering the jobsite or touching the equipment any other persons than the persons engaged in the job, please prepare for safety fences around the unit:

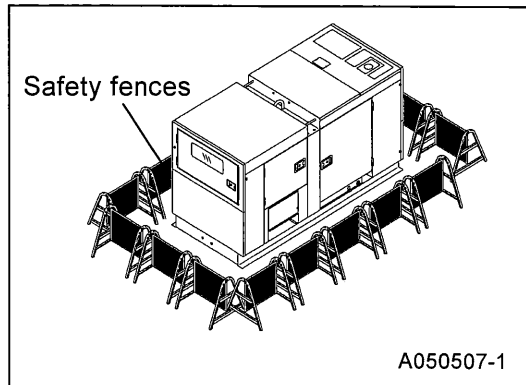

3. Installation

3.3 Leakage Protection Device and Grounding Method



Caution on Grounding

- Make sure to perform grounding connection of the external body of load. If such grounding connection is neglected or fails, it can cause electric shock to human body by leaked current, leading to serious accident as death.
- Grounding terminal for residual current relay and grounding terminal of the package of the machine can be connected to both independent grounding base and to common grounding base.
- This ground fault circuit interrupter does not function to protect such electric shock accident caused between these two wires (cables).

3.3.1 Leakage Protection Device

- This machine is equipped with a leakage relay which detects leakage caused by a defective insulation of working load to prevent an accident such as an electric shock by shutting down the circuit. However, for additional safety, install ground fault circuit interrupter (GFCI) for each load equipment close to the load equipment. The sensitivity current of the leakage relay is 30 mA.


3.3.2 Grounding Method

<Procedure>

- Connect a lead wire fitted with a ground rod to the leakage relay grounding terminal (E) of the three-phase output terminal board.
 - ① Connect the generator machine ground terminal of the package to ground.
 - ② Be sure to ground the package of the load equipment as well.
 - ③ These grounding must be carried out in accordance with local regulations.


3. Installation

Independent grounding method

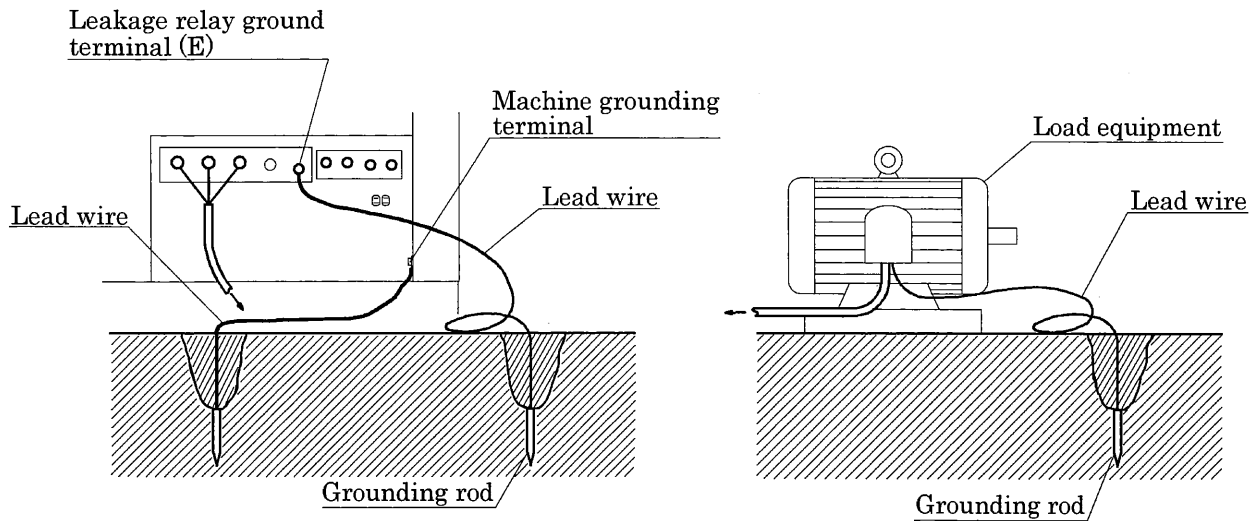

A050399E-2

Common grounding method

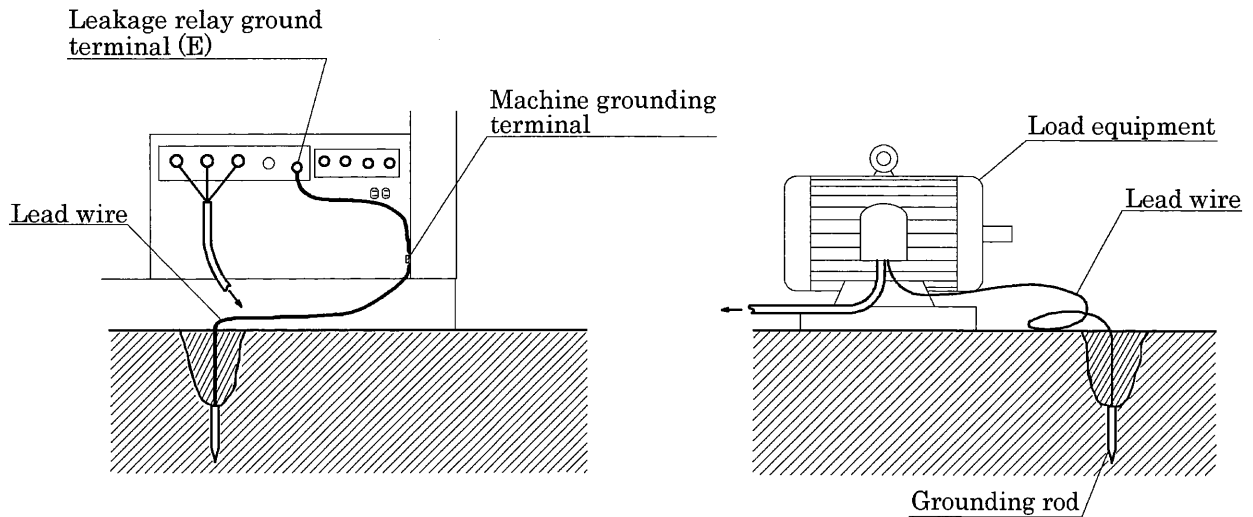


A050400E-2

3. Installation

3.4 Selecting Cable

- Select a cable with sufficient diameter by considering the permissible current on the cable and the distance from the machine to the load.
- If the current flowing to the load exceeds the permissible current of the cable, resultant overheating may burn the cable. Similarly, if the cable is too small in thickness to the length, the input voltage to the load will fall to cause the load input power to drop, as a result, the performance of the machine cannot be displayed.

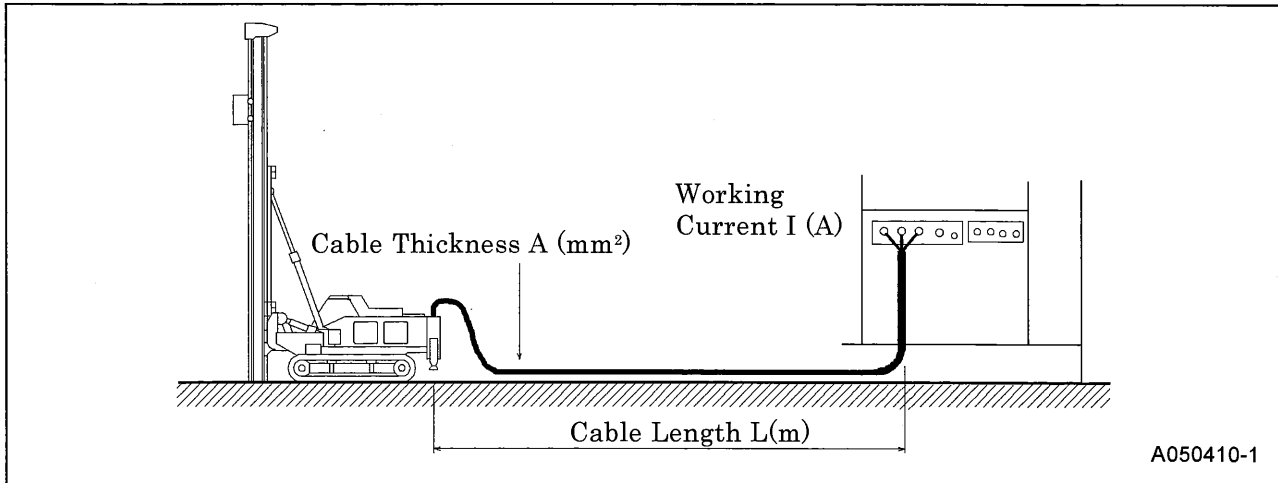

A050410-1

- Simplified three-phase three-wire formula to seek voltage drop or cross-sectional area of the cable from cable length and working current. Select such a cable length and thickness so that the voltage drop will remain less than 5%.

Output system	Voltage drop	Cross-sectional area of the cable	e : Voltage drop (V) e' : Voltage drop between an outside line or one line of each phase, and a neutral line (V)
Single-phase 2-wire Type	$e = \frac{35.6 \times L \times I}{1,000 \times A}$	$A = \frac{35.6 \times L \times I}{1,000 \times e}$	A : Cable thickness (mm ²) L : Cable length (m) I : Working current (A)
Three-phase 3-wire Type	$e = \frac{30.8 \times L \times I}{1,000 \times A}$	$A = \frac{30.8 \times L \times I}{1,000 \times e}$	
Single-phase 3-wire Type and Three-phase 4-wire Type	$e' = \frac{17.8 \times L \times I}{1,000 \times A}$	$A = \frac{17.8 \times L \times I}{1,000 \times e'}$	

- The following tables show the relations between the cable length and the cable thickness (nominal cross-sectional area) suited to the working current. (Based on the condition that working voltage is 200 V, with voltage drop of 10 V.)

Single-Conductor Cable

Unit: mm²

Current \ Length	50m	75m	100m	125m	150m	200m
150A	38	38	50	60	80	100
200A	60	60	60	80	100	125
300A	100	100	100	125	150	200
400A	125	125	150	200	200	250

Three-Conductor Cable

Unit: mm²

Current \ Length	50m	75m	100m	125m	150m	200m
150A	22×2	22×2	38×2	38×2	50×2	50×2
200A	38×2	38×2	38×2	50×2	50×2	60×2
300A	60×2	60×2	60×2	60×2	80×2	100×2
400A	60×2	60×2	60×2	80×2	100×2	125×2

3. Installation

3.5 Selector Valve of Fuel Pipe

⚠ CAUTION

- Always keep watching the fuel feeding conditions while feeding fuel from a separate fuel storage tank separately installed.
- In order to use a separator fuel storage tank, be sure to change the handles of the selector valves to a predetermined position. If you make a mistake in turning the handles, it can burst the fuel pipe and cause overflowing. It could lead to a serious accident.
- If excessive force is loaded to the selection handle, it will not move smoothly and it could cause fuel leakage. Be careful about the handle.

3.5.1 Selector valve


The valve is designed to supply fuel oil directly from a separate storage fuel tank provided outside the machine, using the selector valves as shown in the following figures.

3.5.2 Operation method

- ① Unit is delivered from factory with fuel line piping and selector valves built in as shown in the following Fig.1. When operating a unit, using installed fuel tank, run the machine with the fuel line piping and the handles of selector valves factory-arranged.
- ② When using a separate storage tank, remove the plug fitted at the connections to the separator tank and make piping as shown in Fig.2. And then turn the handles of the selector valve as shown in Fig.2.
- ③ When removing the piping connections, make sure to return the handles to the original positions shown in Fig.1 and install the plugs.


3.5.3 Installation of Separate Storage Fuel tank and piping method

- ① Use oil resistant hoses of inside diameter of 8mm to 10mm.
- ② Install the fuel tank so that the fuel level of the tank may be kept at the level from zero to 2.5m high from the machine installation level.
- ③ In order to avoid suction of water and sediment together, install the suction pipe so that the inlet port of suction pipe may be kept at the 15mm to 20mm higher level than the bottom line of the tank. Also install the outlet port of the return pipe inside the tank. (See Fig.2 · A)
- ④ When refilling fuel in the tank, take much care not mix water and sediment.

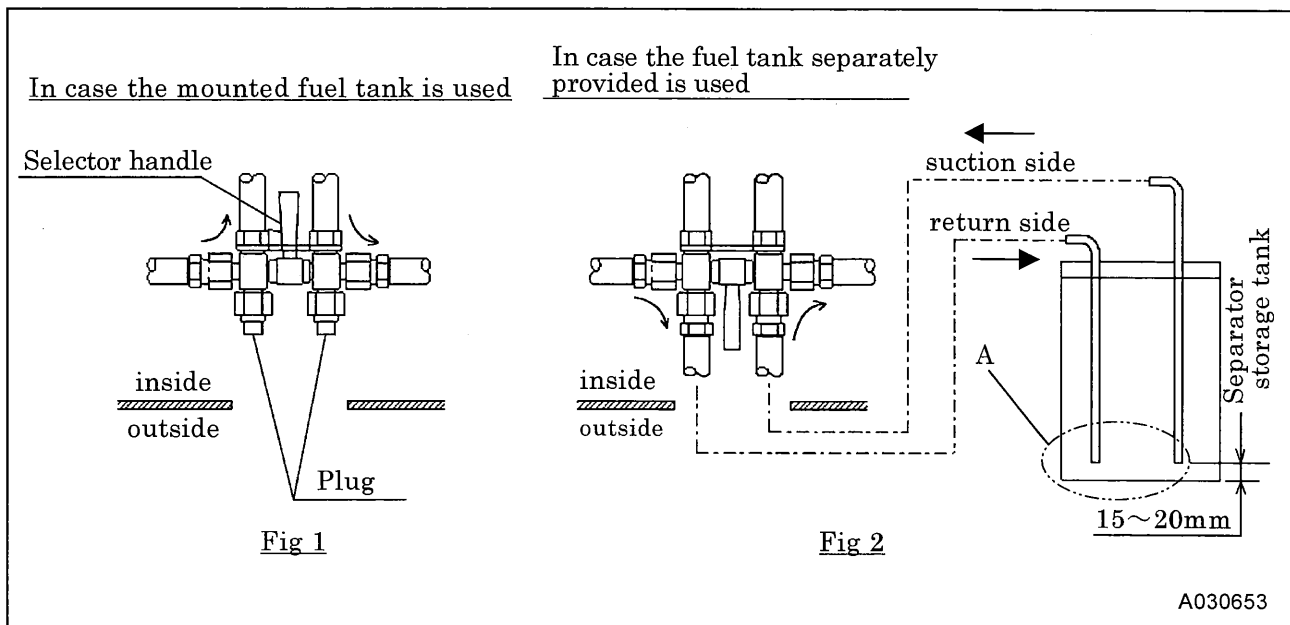

4. Operation

4.1 Instrument panel

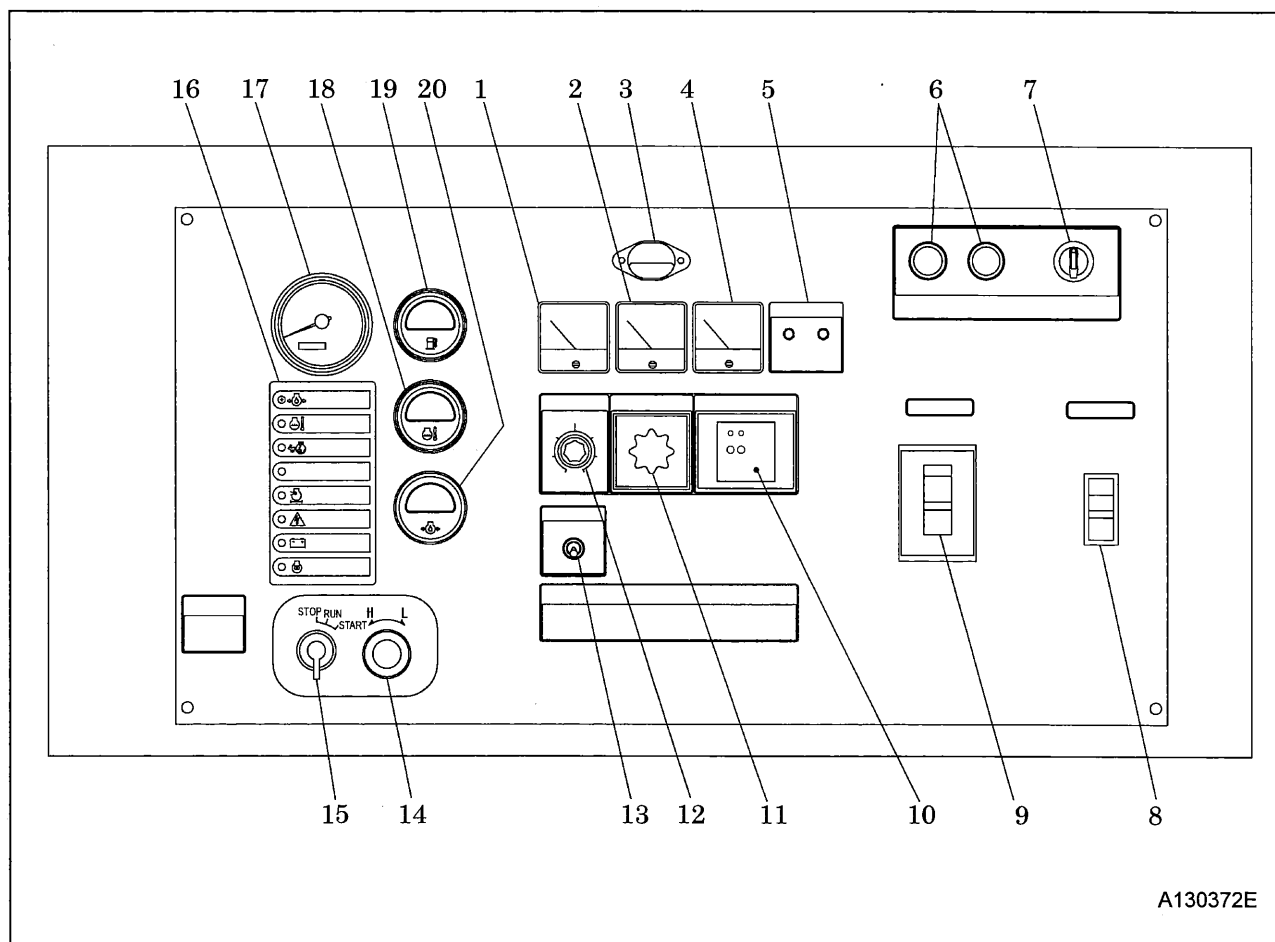

- | | |
|--|--|
| 1. Voltmeter | 11. Current selection switch |
| 2. Ammeter | 12. Voltage regulator |
| 3. Pilot lamp | 13. Panel light switch |
| 4. Frequency meter | 14. Speed control knob |
| 5. Output indicator lamp | 15. Starter switch |
| 6. Synchronous detection lamp | 16. Monitor lamp (for details, see 4.2.1) |
| 7. Synchronizing switch | 17. Engine tachometer current (with hourmeter) |
| 8. Circuit breaker (Dedicated to single phase) | 18. Water temperature gauge |
| 9. Circuit breaker | 19. Fuel gauge |
| 10. Leakage relay | 20. Oil pressure gauge |

4. Operation






 
4.2 Protection device



- For prevention of troubles during operation, this machine is provided with various protection devices. When the engine stops due to function of the protection devices and circuit breaker trips, get rid of the causes of trouble, referring to the trouble shooting clause and then restart operation.

4.2.1 List of protection devices

- This machine is equipped with the following devices in the table. Repair and make necessary treatment in accordance with the item ○.


Item	Engine stops	3 phase or single phase circuit breaker trips.	Lamp display	Monitor	Functions
Engine oil pressure drop	○	○	○		When engine oil pressure drops, it functions. Operating pressure: lower than 0.05MPa
Engine water temperature rises.	○	○	○		In case of abnormal rise of engine water temperature, it functions. temperature reaches 105°C
Excessive rotation	○	○	○		When engine rotates excessively, it begins to function. Function rotation: 2,070min ⁻¹ (69Hz)
Clogging of air filter	—	—	○		When air filter is clogged and it becomes necessary to clean it, it functions.
Over current or short circuit	—	○	—	—	In case of overload or short circuit accident, it functions.
※Leakage current	—	○	○		In case of current leakage it functions. Sensing current: 30 mA
Discharged battery	—	—	○		It functions in case of faulty battery.

※In order to ensure the function of ground fault circuit interruptor device, make sure to grounding connection. (See 3.3.)

4. Operation

4.2.2 Leakage Relay

- When residual current flows to machine and load, the residual current indicator lamp goes on to trip the circuit breaker and circuit breaker (dedicated to single phase).
(Set value at which it starts to function: 30mA)
- Pressing the reset button of leakage relay, and returning the lever of the circuit breaker to OFF position once, then it is possible to switch ON the circuit-breaker again. (See 4.2.3.)

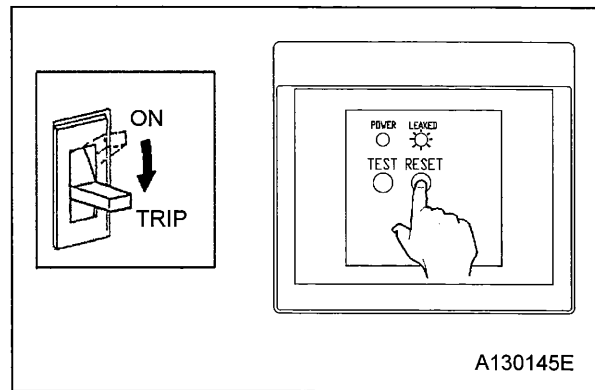


4.2.3 Circuit-breaker and circuit breaker(dedicated to single phase).

- In case overload and short-circuited wire connection should occur, the circuit-breaker trips.
- When this is tripped, stop the unit immediately and reset the circuit breaker after getting rid of the causes of trouble.


<How to reset>

- In order to reset the lever of circuit breaker, press hard the lever downward till the lever sounds “click”.

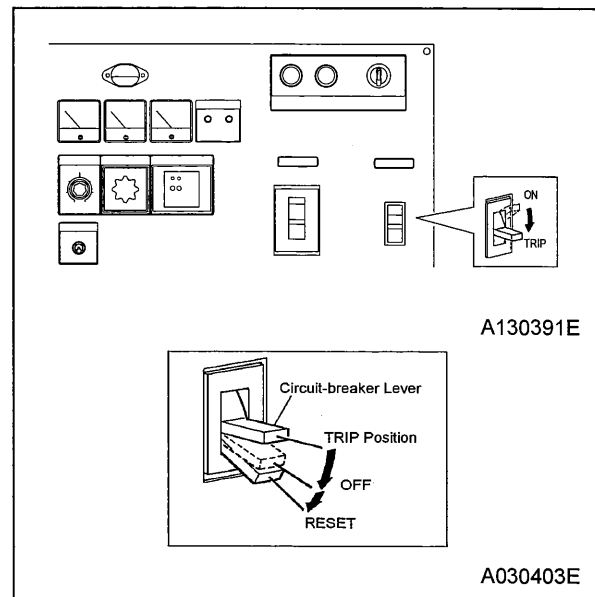

4.2.4 Thermal relay

- In case overload or short-circuit should occur to load or load connection cable, this relay functions to trip the circuit breaker.
- It is not necessary to push the reset button even after the three phase main breaker is tripped since the thermal relay is set automatic return at factory.

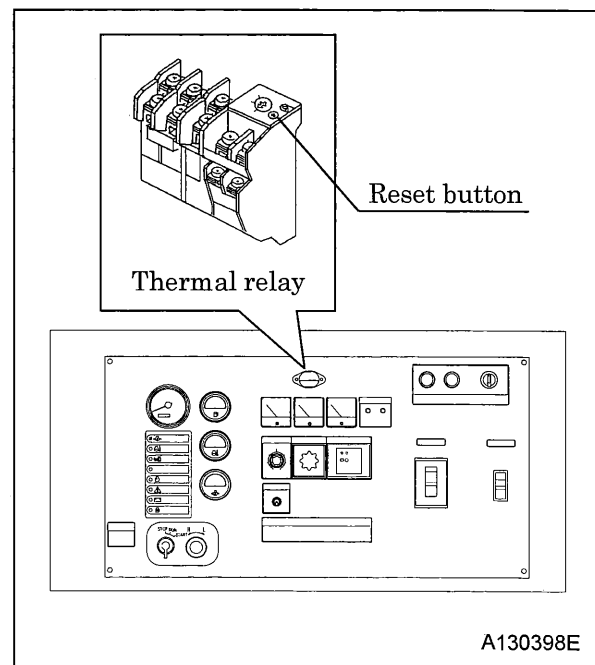

4. Operation

4.2.5 Circuit protector (CP) for AVR protection

AVR is equipped with circuit-protector (CP) for protection against overcurrent. Under the following cases, it happens to function.

- In case the machine gets overloaded while engine speed is still lower.
- In case the output voltage of machine is increased higher than the specified voltage.


<Symptom >

- When circuit protector functions and load is applied to the machine, such trouble as larger variance of voltage and/or delayed voltage recovery follow.

<How to reset >

- Press the white colored AVR button inside the control panel for resetting the circuit-breaker.

Note: Do not hold the button with such sharply pointed things as a screwdriver, ball point pens etc.

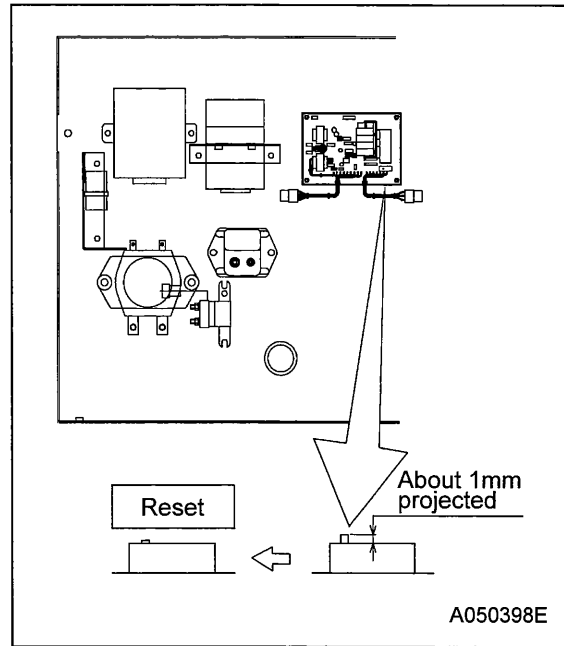

4.3 Check Frequency Selection Switch for AVR




Do not leave control box open

- Never touch the interior of control panel during operation.
- Notice that the voltage of several hundreds volts is applied in the control panel.
- When checking or operating the interior of the control panel for changing AVR frequency, be sure to stop the machine, remove the starter key from the starter switch, then carry out a work. The checker must keep the key during inspection.



- The AVR characteristics should be changed according to the frequency.
- When changing the frequency, set the AVR frequency selection switch "1" in the control panel to the frequency in use.
- If the frequency selection switch "1" is not set to suite the frequency in use, the rated voltage cannot be obtained.

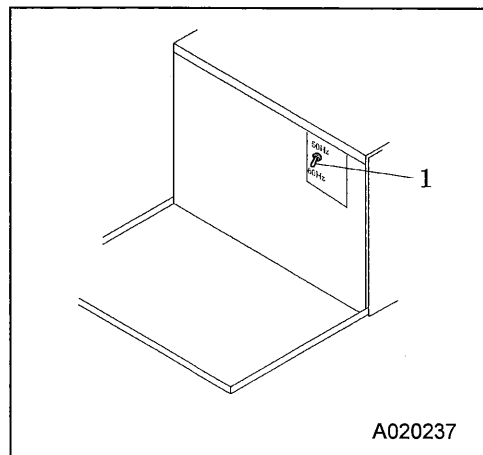


4. Operation

4.4 How To Switch Voltages

WARNING


- It is possible to select 3 phase 4 wire 200 volt or 3 phase 4 wire 400 volt. But before starting operation, make sure to confirm the voltage set for the machine without fail. If any load is connected to the machine with the wrong voltage set, it can cause damage or burning accident to the load.
- When switching the voltages, make sure to stop the machine.

- Open the operation panel on the control panel, and switch the voltages by connecting of short-circuit plate "1" as shown in the following figure.

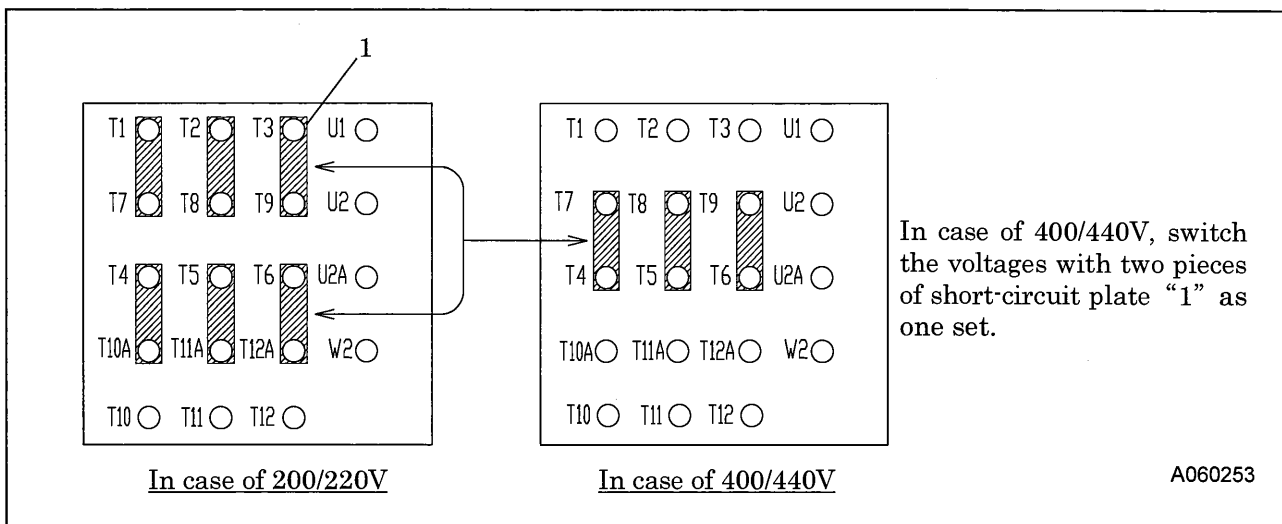

In case of 400/440V, switch the voltages with two pieces of short-circuit plate "1" as one set.

- When you start operation, the lamp of your selected voltage goes on. So make sure to check whether the lamp goes on correctly to your selected voltage.

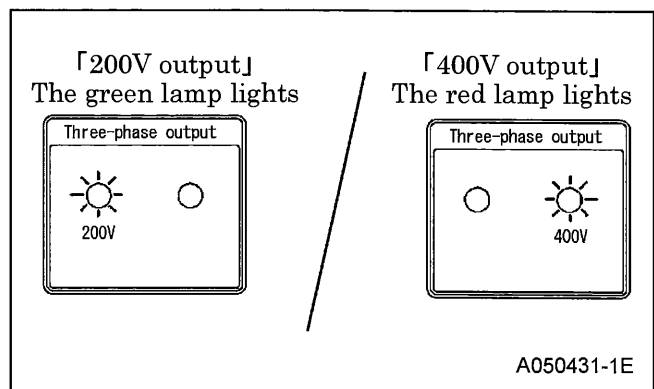

4. Operation



4.5 Connecting Load

⚠ WARNING

Electric shock and electric leak

- Make sure not to connect the output terminal of the machine with the commercial power source from electric power company. This is not only prohibited by the regulations, but it may cause an electric shock, machine troubles and even a fire.
- Make sure to ground the machine and the load. It could cause an electric shock when the machine is installed at a damp place or on a steel frame or a steel plate.
- Never touch the output terminals during operation.
- Notice that the voltage of several hundreds volt is applied to the output terminal.
- When removing or connecting a connecting cable for changing load, be sure to switch OFF the circuit breaker, remove the starter key from the starter switch, then carry out a work. The operator must keep the key during operation.
- For a connecting cable to load, do not use a cable with damaged sheath nor an inappropriate insulation cable to the voltage.

Secure connections between each cable terminal and input/output terminal. Otherwise, it may be slackened during operation and may cause a fire or an electric shock accident.

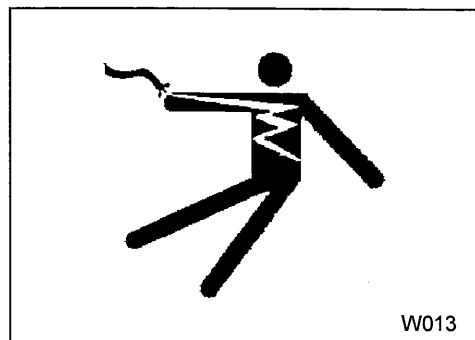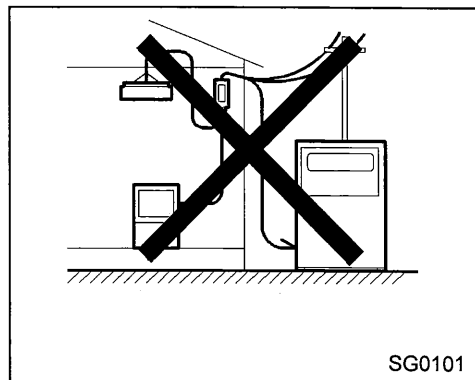


IMPORTANT

- Notice that the terminal O is not a grounding terminal of the generator. Never connect a grounding wire to it. Such connection may cause the generator main unit or the load troubles.
- When using a single-phase load [200/220V or 115/127V], see to it that the loads on the different phases will be evenly balanced. Unbalanced loads may cause the generator main unit burning.

- Select a cable with sufficient diameter by considering the load capacity and the distance from the generator to the load. Use terminals for connection and securely fasten them.
- After checking phase number and voltage of the load, make sure to connect them correctly.


—Terminal size—

Three-phase output(U,V,W,O) : M14
 Leakage relay ground terminal(E) : M6
 Single phase output (U₁,U₂) : M10

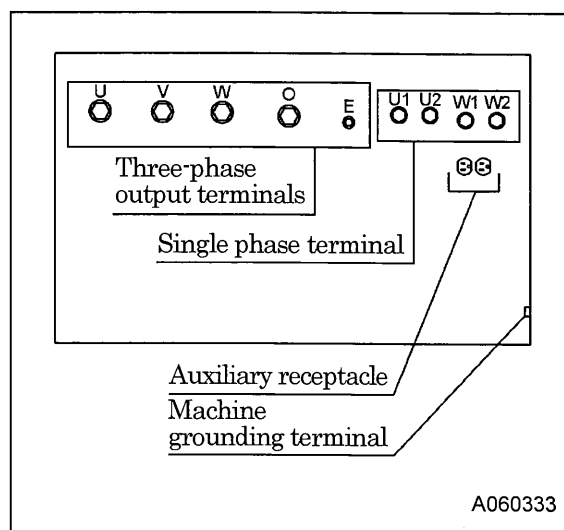

4. Operation


- Install a switch between the output terminal and the load to switch on/off the load. Do not switch the load on/off directly by the circuit-breaker of the machine.
- It could cause damage to the Connect the connecting cable to the load so that the output terminals should not touch each other. circuit-breaker.

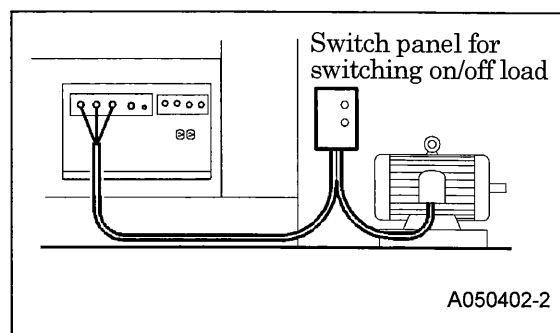

4.5.1 How to connect three phase load

- In case of three-phase load:
Adjust each current value of each phase (U.V.W) so that each value may not exceed the value in the following table

Type	SDG125S-3A6	SDG150S,AS-3A6
	Permissible current value	
50Hz/200V	289A	361A
60Hz/220V	328A	394A
50Hz/380V	152A	190A
50Hz/400V	144A	180A
60Hz/440V	164A	197A

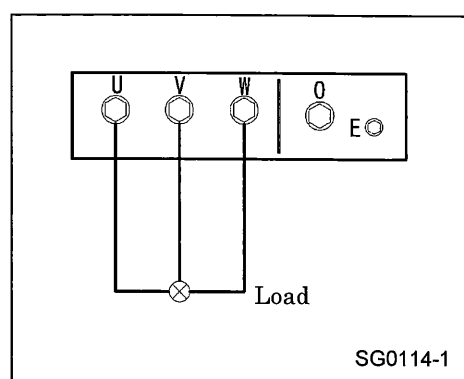

- In case inverter load:
The inverter capacity (input kVA of inverter) should not exceed the following value (within rated output \div 3.0). Also select generator so that the rated output (kVA) of generator so that the rated output (kVA) of generator may be three times of the inverter capacity.
Example: In case of SDG150S, at 50Hz, $125\text{kVA} \div 3.0 = 41.7\text{kVA}$.
50Hz: 41.7kVA (Input kVA of inverter) It is possible to use inverter capacity up to this value.
60Hz: 50kVA (Input kVA of inverter) It is possible to use inverter capacity up to this value.





4. Operation

4.5.2 How to connect single phase load

The method of connection of 3 phase 4 wire single phase load is as follows.





The allowable current limit shall not exceed the values in the following table.

[SDG125S-3A6]

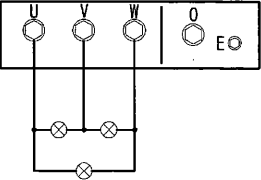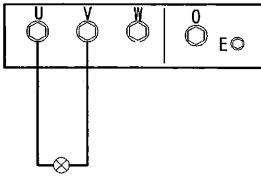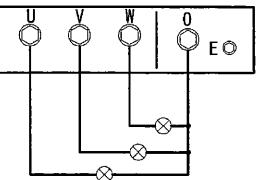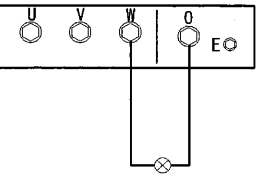	Conditions of Load	Allowable Current Limit	Conditions												
In case of selection of 3 phase 4 wire	In case of three phases 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Type</th> <th>Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/200V</td> <td>289A</td> </tr> <tr> <td>60Hz/220V</td> <td>328A</td> </tr> <tr> <td>50Hz/380V</td> <td>152A</td> </tr> <tr> <td>50Hz/400V</td> <td>144A</td> </tr> <tr> <td>60Hz/440V</td> <td>164A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/200V	289A	60Hz/220V	328A	50Hz/380V	152A	50Hz/400V	144A	60Hz/440V	164A	Allowable current limit up to the rated current. Adjust the load capacity so that each current value of each phase (U,V,W) may not be more unbalanced than 50%.
	Type	Permissible current value													
	50Hz/200V	289A													
	60Hz/220V	328A													
50Hz/380V	152A														
50Hz/400V	144A														
60Hz/440V	164A														
In case of using single phase 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Type</th> <th>Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/200V</td> <td>144A</td> </tr> <tr> <td>60Hz/220V</td> <td>164A</td> </tr> <tr> <td>50Hz/380V</td> <td>76A</td> </tr> <tr> <td>50Hz/400V</td> <td>72A</td> </tr> <tr> <td>60Hz/440V</td> <td>82A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/200V	144A	60Hz/220V	164A	50Hz/380V	76A	50Hz/400V	72A	60Hz/440V	82A	50% or less of the rated current is allowable.	
Type	Permissible current value														
50Hz/200V	144A														
60Hz/220V	164A														
50Hz/380V	76A														
50Hz/400V	72A														
60Hz/440V	82A														
In case of three phases 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Type</th> <th>Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/115V (200V)</td> <td>289A</td> </tr> <tr> <td>60Hz/127V (220V)</td> <td>328A</td> </tr> <tr> <td>50Hz/219V (380V)</td> <td>152A</td> </tr> <tr> <td>50Hz/231V (400V)</td> <td>144A</td> </tr> <tr> <td>60Hz/254V (440V)</td> <td>164A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/115V (200V)	289A	60Hz/127V (220V)	328A	50Hz/219V (380V)	152A	50Hz/231V (400V)	144A	60Hz/254V (440V)	164A	Allowable current limit up to the rated current. Adjust the load capacity, so that each current value of each phase (U,V,W) may not be more unbalanced than 50%.	
Type	Permissible current value														
50Hz/115V (200V)	289A														
60Hz/127V (220V)	328A														
50Hz/219V (380V)	152A														
50Hz/231V (400V)	144A														
60Hz/254V (440V)	164A														
In case of using single phase 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Type</th> <th>Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/115V (200V)</td> <td>144A</td> </tr> <tr> <td>60Hz/127V (220V)</td> <td>164A</td> </tr> <tr> <td>50Hz/219V (380V)</td> <td>76A</td> </tr> <tr> <td>50Hz/231V (400V)</td> <td>72A</td> </tr> <tr> <td>60Hz/254V (440V)</td> <td>82A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/115V (200V)	144A	60Hz/127V (220V)	164A	50Hz/219V (380V)	76A	50Hz/231V (400V)	72A	60Hz/254V (440V)	82A	50% or less of the rated current is allowable.	
Type	Permissible current value														
50Hz/115V (200V)	144A														
60Hz/127V (220V)	164A														
50Hz/219V (380V)	76A														
50Hz/231V (400V)	72A														
60Hz/254V (440V)	82A														

4. Operation


[SDG150S,AS-3A6]

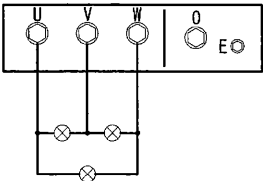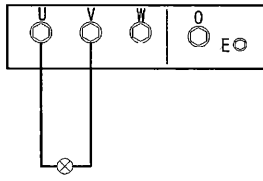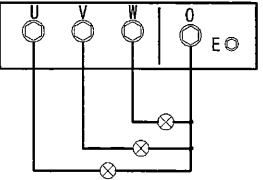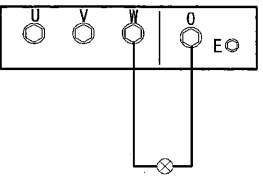	Conditions of Load	Allowable Current Limit	Conditions												
In case of selection of 3 phase 4 wire	In case of using 2 phases 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Type</th> <th style="width: 50%;">Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/200V</td> <td>361A</td> </tr> <tr> <td>60Hz/220V</td> <td>394A</td> </tr> <tr> <td>50Hz/380V</td> <td>190A</td> </tr> <tr> <td>50Hz/400V</td> <td>180A</td> </tr> <tr> <td>60Hz/440V</td> <td>197A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/200V	361A	60Hz/220V	394A	50Hz/380V	190A	50Hz/400V	180A	60Hz/440V	197A	Allowable current limit up to the rated current. Adjust the load capacity so that each current value of each phase (U,V,W) may not be more unbalanced than 50%.
	Type	Permissible current value													
	50Hz/200V	361A													
	60Hz/220V	394A													
50Hz/380V	190A														
50Hz/400V	180A														
60Hz/440V	197A														
In case of using single phase 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Type</th> <th style="width: 50%;">Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/200V</td> <td>180A</td> </tr> <tr> <td>60Hz/220V</td> <td>197A</td> </tr> <tr> <td>50Hz/380V</td> <td>95A</td> </tr> <tr> <td>50Hz/400V</td> <td>90A</td> </tr> <tr> <td>60Hz/440V</td> <td>98A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/200V	180A	60Hz/220V	197A	50Hz/380V	95A	50Hz/400V	90A	60Hz/440V	98A	50% or less of the rated current is allowable.	
Type	Permissible current value														
50Hz/200V	180A														
60Hz/220V	197A														
50Hz/380V	95A														
50Hz/400V	90A														
60Hz/440V	98A														
In case of using 3 phases 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Type</th> <th style="width: 50%;">Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/115V (200V)</td> <td>361A</td> </tr> <tr> <td>60Hz/127V (220V)</td> <td>394A</td> </tr> <tr> <td>50Hz/219V (380V)</td> <td>190A</td> </tr> <tr> <td>50Hz/231V (400V)</td> <td>180A</td> </tr> <tr> <td>60Hz/254V (440V)</td> <td>197A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/115V (200V)	361A	60Hz/127V (220V)	394A	50Hz/219V (380V)	190A	50Hz/231V (400V)	180A	60Hz/254V (440V)	197A	Allowable current limit up to the rated current. Adjust the load capacity, so that each current value of each phase (U,V,W) may not be more unbalanced than 50%.	
Type	Permissible current value														
50Hz/115V (200V)	361A														
60Hz/127V (220V)	394A														
50Hz/219V (380V)	190A														
50Hz/231V (400V)	180A														
60Hz/254V (440V)	197A														
In case of using single phase 	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Type</th> <th style="width: 50%;">Permissible current value</th> </tr> </thead> <tbody> <tr> <td>50Hz/115V (200V)</td> <td>180A</td> </tr> <tr> <td>60Hz/127V (220V)</td> <td>197A</td> </tr> <tr> <td>50Hz/219V (380V)</td> <td>95A</td> </tr> <tr> <td>50Hz/231V (400V)</td> <td>90A</td> </tr> <tr> <td>60Hz/254V (440V)</td> <td>98A</td> </tr> </tbody> </table>	Type	Permissible current value	50Hz/115V (200V)	180A	60Hz/127V (220V)	197A	50Hz/219V (380V)	95A	50Hz/231V (400V)	90A	60Hz/254V (440V)	98A	50% or less of the rated current is allowable.	
Type	Permissible current value														
50Hz/115V (200V)	180A														
60Hz/127V (220V)	197A														
50Hz/219V (380V)	95A														
50Hz/231V (400V)	90A														
60Hz/254V (440V)	98A														

4. Operation

4.5.3 Single Phase Output (100/110V 50/60Hz)

- In the output terminal portion the single-phase output terminal (U₁-U₂) (W₁-W₂) two set and the auxiliary receptacle are provided.
- When the AC ammeter indicates 200/220V and 400/440V, the single phase output voltage is 100/110V.
- The single phase output can be used up to the rated outputs mentioned in the following table. When using the auxiliary receptacle, the total load capacity including U₁-U₂ terminal shall be used not to exceed the rated single phase output in the following table.
- In case that auxiliary receptacle is used, turn "ON" the circuit breaker (dedicated to single phase output) fitted on the control panel.

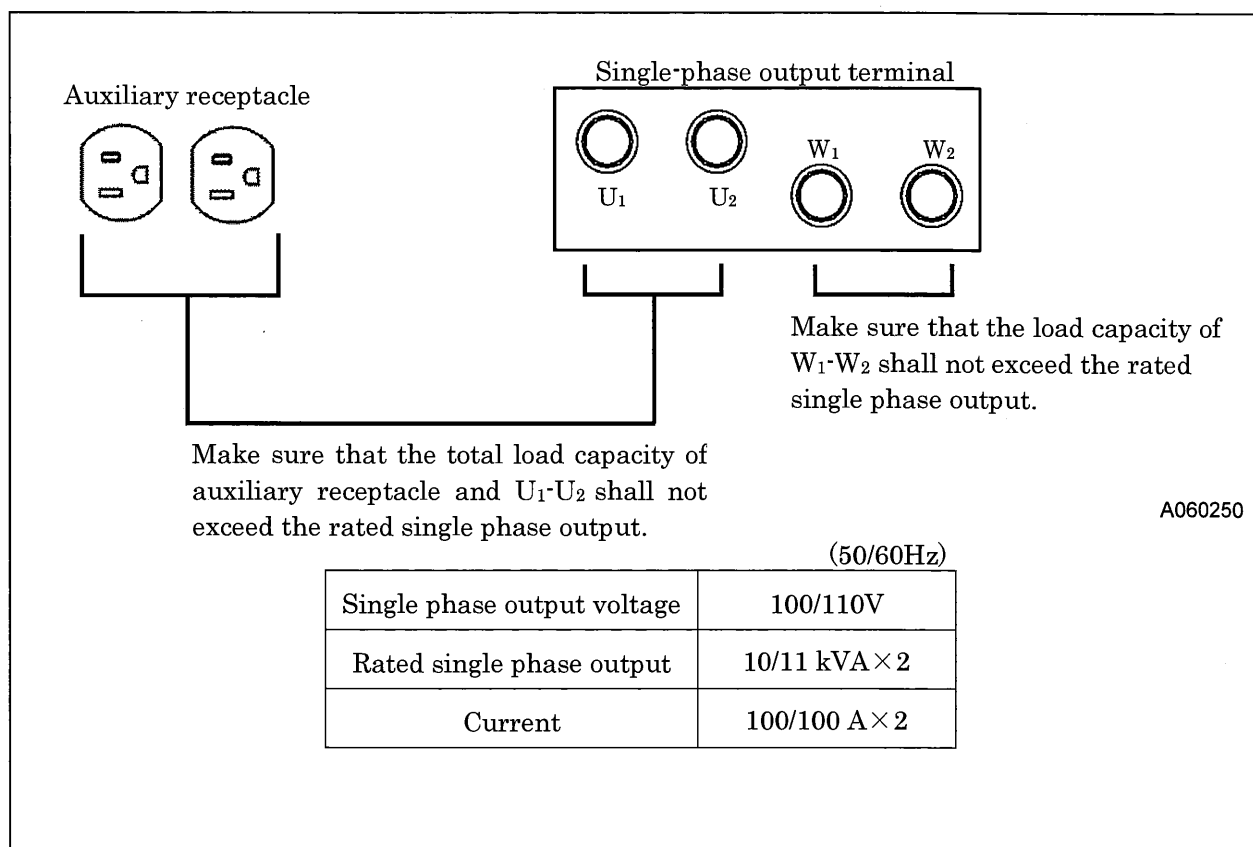

- When using both single output and three phase output at the same time, the machine shall be used lower than the allowable current limit.
- Two auxiliary receptacles shall be used lower than total 15A.

4. Operation


4.6 Engine Oil · Coolant · Fuel

4.6.1 Engine Oil

IMPORTANT

- Viscosity of engine oil greatly affects startability, performance, oil consumption of the engine, as well as wear of the moving parts.
- Choose appropriate oil based upon the table below according to the outside air temperature.

Ambient temperature range and oil viscosity (SAE)

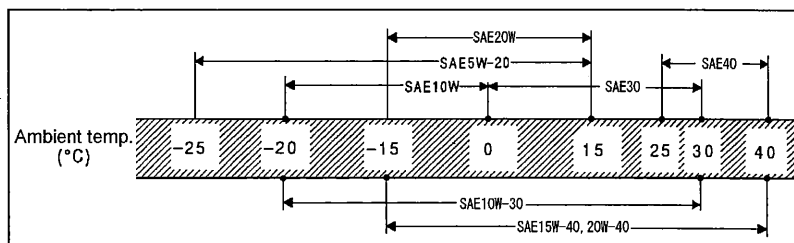

A100293E

***When the unit is delivered from factory, it is filled with the engine oil having the following specifications:**

Classification	API service classification CD class or higher
Viscosity	SAE10W-30

- When two or more different brands of oil are mixed, its performance can be deteriorated. Do not mix oils.
- When it is expected to be used for a long period at light load (less than 20% load), it is better to replace the oil with suitable oil.
- Follow the designated regulations to dispose of engine oil.

4.6.2 Coolant

IMPORTANT

Quality of coolant and antifreeze

- Use soft water of good quality such as tap water for coolant.
- When water with dirt, sand, and/or dust contained, or hard water such as well water (ground water) is used, this will cause deposits inside radiator or on cylinder head, and will cause engine overheat due to poor flow of coolant.
- When the unit is used in a cold region and possible freezing is expected, it is recommended to use LLC (Antifreeze) for the coolant.
- Adjust mixing ratio of LLC with water according to the temperature. **(When the unit is delivered from factory, it is filled with the oil of density 35%.)**
Use LLC within the range of its mixing ratio between 30 and 60%. (If LLC in the water exceeds more than 60%, it may decrease its antifreezing effect.)
- Follow the designated regulations to dispose of LLC (Antifreeze).

4.6.3 Fuel

IMPORTANT

Choose appropriate

- Be sure to use diesel fuel oil.
(Using other oil will cause low power output or damage the engine.)
- As for fuel, use diesel fuel oil (having higher than 45 cetane number).
- Use of diesel fuel oil having lower than 45 cetane number will cause inferior function to engine and, what is worse, it will cause serious accident to the engine.

4. Operation

4.7 Check before Starting the Machine



WARNING

Check before starting the unit


- Be sure to check the machine before operation.
When any abnormality is found, be sure to repair it before starting the unit.
- Be sure to make daily check before operation. If the unit is operated without prior check and without noticing its abnormality, such operation could cause seizure of components or may even cause fire.

4.7.1 Check Engine Oil Level

- The machine should be on level before checking oil level.
- When you check oil level after you have once started operation, wait 10 to 20 minutes after stopping engine, before checking the oil level.

<Procedure>

- ① Pull out the engine oil level dipstick, and wipe it with a clean cloth.
 - ② Then, re-insert the dipstick fully and pull it out again. If the gauge shows the oil level between HIGH and LOW limits, it is normal.
 - ③ When the oil level is below its LOW, add engine oil.
(See 5.5.1.)
- While checking oil level, check also for contamination. If the oil is found dirty, contaminated, or should be changed according to the periodic inspection list, change the oil.

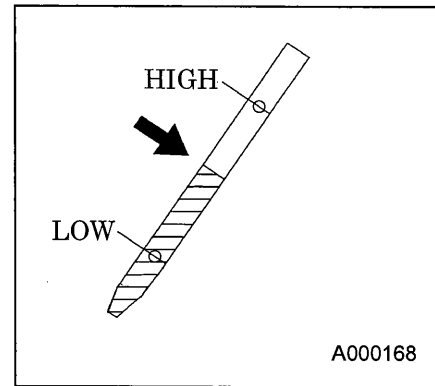


4.7.2 Check Coolant Level




CAUTION

Taking off the radiator cap

- Be sure to stop the machine first and then loosen the radiator cap slowly, after the coolant water is sufficiently cooled and the inner pressure is released.
If this procedure is neglected, its inner pressure can blow off the cap, and steam jetting out of the radiator could cause scalding.

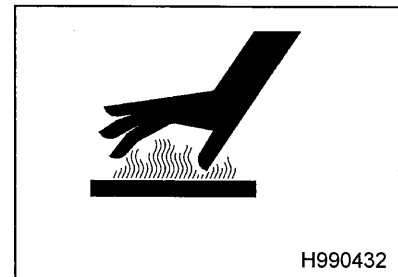

- Check the coolant level in the reserve tank. If it is lower than the limit, open the cap and replenish the coolant.
(Level must be kept above MIN mark)
- If little coolant is left in the reserve tank, replenish the tank and radiator also. (See 5.5.17.)

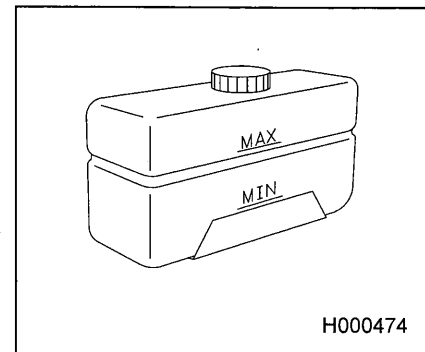

4. Operation

4.7.3 Check Fuel

- Before starting operation, make sure to check the level of residual fuel so that fuel shortage during operation can be avoided.
- If necessary, drain condensate accumulated at the bottom of the fuel tank.

CAUTION

Fire prevention


- Do not, under any circumstance, bring lit cigarettes and/or matches to the fuel.
- The fuel is extremely flammable and dangerous. Be careful of fire because it is very likely to catch fire.
- Refuel only after stopping the engine, and never leave open fuel can near the machine. Do not spill. It could cause a fire. When it is spilled, wipe it up completely.
- Refilling fuel tank should be done in an outdoor well-ventilated place.
- **Do not fill fuel oil up to the cap level. When fuel tank is filled up to the cap level, fuel oil will be overfilled due to volume expansion caused by rise of ambient temperature. Further, fuel will be possibly spilled from fuel tank due to vibration caused during movement and/or transportation of machine.**



4.7.4 Check Sedimentor

Check if the red float "2" in the water sedimentor rises up to the water drain level, then drain water if it is near the drain level "1".
< Procedures >

- ① Loosen the drain valve "4" to drain the water from the sedimentor.
 - ② After draining the condensate, be sure to fasten the drain valve "4".
- Removing the bowl "3" of the sedimentor shown in the right figure, fuel comes out. Removing the bowl of the sedimentor shown in the right figure, fuel comes out.
 - Drain the condensate in container, and then dispose of condensate according to the designated regulations.

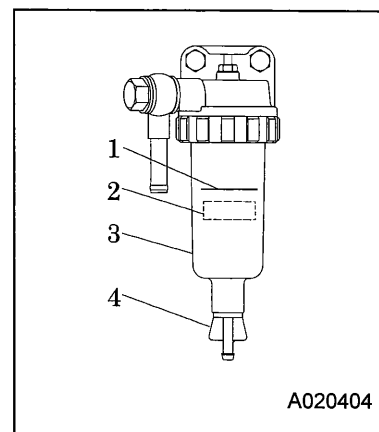

4.7.5 Check Ground of Machine Package and Leakage Relay

Make sure that the machine grounding terminal of the machine package, leakage relay grounding terminal, and the package of the load are securely grounded. (See 3.3.)

4. Operation

4.7.6 Check belt Tension


IMPORTANT

- If belt tension too tight, it can cause shaft breakage or shorten the life of a bearing. If too loose, the belt may slip and will cause early breakage or damage to the belt.

Adjust the belt by the following procedure:


<Procedures>

- ① Unfasten the mounting bolts of the alternator to adjust the alternator.
- ② Visually check the belt for any crack, wear, and other defect.
- ③ Loosen the mounting bolt of alternator once. Then adjust it so that the belt deflection will be 8-12 mm (98.1N) when pressing with a finger.
- ④ Be careful not to leave any grease and LLC on the belt. If any of such material is left, wipe it off completely.

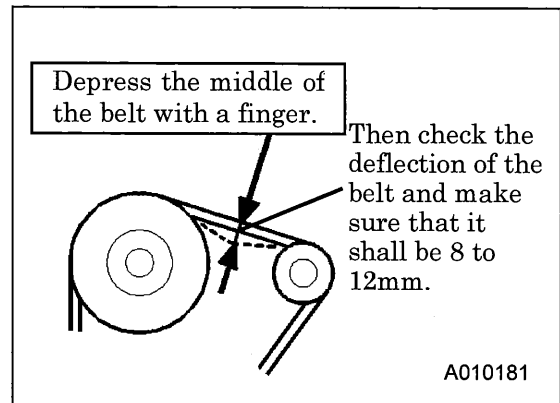


4.7.7 Check of thermo-label on the stator

- Thermo-label on the stator irreversibly changes its color from white to brown by reaching or exceeding 100°C, that signalize overload during operation. Do not overload the generator.
- Clean internal components of the alternator from dust and dirt with compressed air.
- Replace thermo-label, if it have changed the color once.
- When replace it, contact our office nearby or distributor.

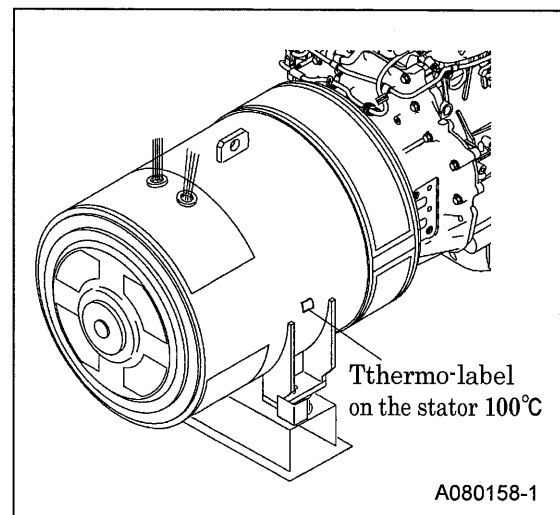

4.7.8 Cleaning the instruments inside control panel

- Before starting operation, open control panel and check each breaker, terminal plate and each controller for any dust, sand and dirt accumulated.
- If the machine is operated with such dust, sand and dirt sticking, it could cause malfunction and trouble of instrumentation. If any, stop the machine, and clean them by blowing compressed air. when doing cleaning job, wear protection glasses.

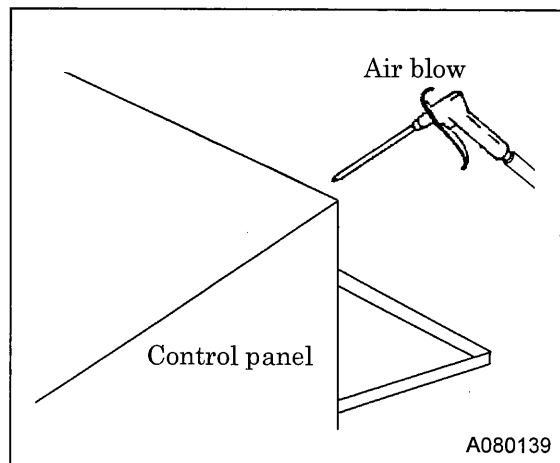


4. Operation

4.8 Operation and Stopping

WARNING

Never touch the interior of output terminals ,control board

- Keep the output terminal cover shut and locked whenever the machine is running.
- Notice that the voltage of several hundreds volt is applied to the output terminal and control board.
- When opening the door unavoidably, be careful not to touch the rotating parts and hot parts. It could cause scalding and serious injury.
- When removing or connecting a connecting cable for changing load, be sure to switch OFF the circuit breaker, remove the starter key from the starter switch, then carry out a work. The operator must keep the key during operation.
Neglecting the cautions mentioned above, and a third party starting the machine during operation may cause serious accidents such as electric shock.

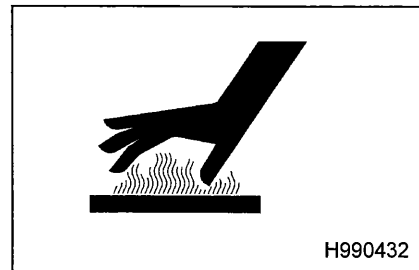

CAUTION

Pay caution to overload and unbalanced load

- When the breaker functions so often during operation, reduce the load.
- When using single- phase load, check the current of each phase and try to keep the load of each phase constantly average.
- If you continue to operate the generator main unit, ignoring and neglecting these cautions, it could cause burning to the unit and resulting in fire. Furthermore, should continue operation at the lower level than the standard rated frequency, it could cause burns to the generator main unit and also the motor of the load.

CAUTION

Draining during operation prohibited

- Do not, under any circumstance, open the portions below during operation.
- Coolant drain valve and plug
- Engine oil drain valve and plug



4. Operation

IMPORTANT

- After the engine starts up, warm up it under unload for approx. five minutes.
 - Warming up after starting up is necessary for smooth operation of the engine. Do not operate the engine at full load immediately after it starts up. This will shorten the equipment life.
 - During the warm-up operation, examine the different parts of the equipment for any looseness, leakage of water, oil, fuel, and other irregularities.
 - Also, make sure that the alarm lamps are off.
 - Be sure to operate the generator at a rated frequency, irrespective of the load capacity.
- If the machine is operated with a frequency lower than the rated frequency, it could cause the generator main unit or to be burned.

4.8.1 Procedure to Start the Unit

Follow the starting procedure below.

<Start engine>

- ① Make sure that both circuit breaker (dedicated to single phase) "6" and circuit breaker "5" are "OFF".
- ② Turn the starter switch "2" to "RUN". Then preheating lamp "1" glows.
- ③ Immediately when the preheat lamp "1" switches off, fully turn the starter switch "2" clockwise to start engine. Engine rpm rises up to the rated rpm.
- ④ Once the engine has started up, leave the engine running to warm up for approximately five minutes.

<Check and confirm voltage and frequency>


- ① After finishing warming-up operation, check the frequency meter "8". When it is wrong, pull the knob "B", pushing the button "A" of the speed control knob "6" and adjust it for the rated speed (rated frequency speed) by turning the knob "B". (See 4.8.2.)

After having adjusted it, fix it by turning the locknut "C" clockwise.


- ② While watching the voltmeter "7", turn the voltage regulator controlling "4" knob to set the voltage to the rated. (See 4.8.2.)
- ③ Output indicator lamp "9" is displayed in accordance with the selected output. 200V output lamp glows in green, and 400V lamp in red.

<Loaded operation>

- ① Switch circuit breaker (dedicated to single phase) "6" or circuit breaker "5" "ON", then supply power to the load.
 - ② During operation, check and confirm whether the generator functions properly, according to the table on next page.
- ※ Before starting to supply power to the load, make sure that the voltage is in accordance with the load.

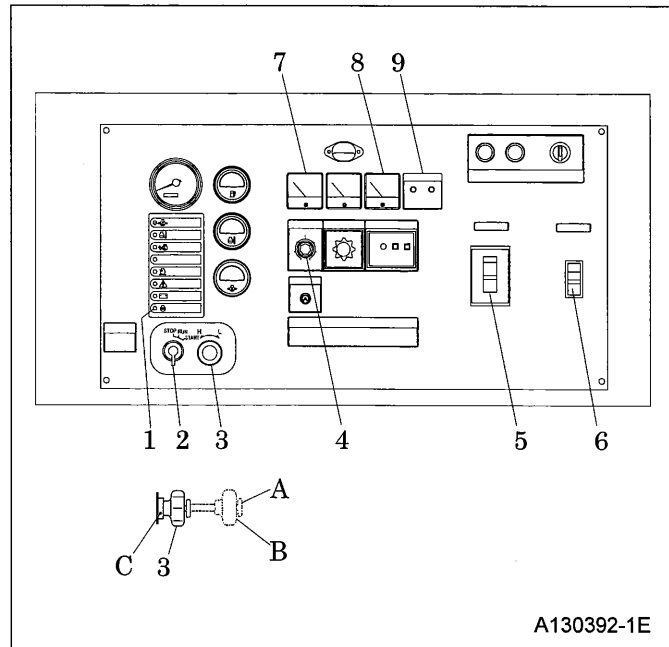

A130392-1E

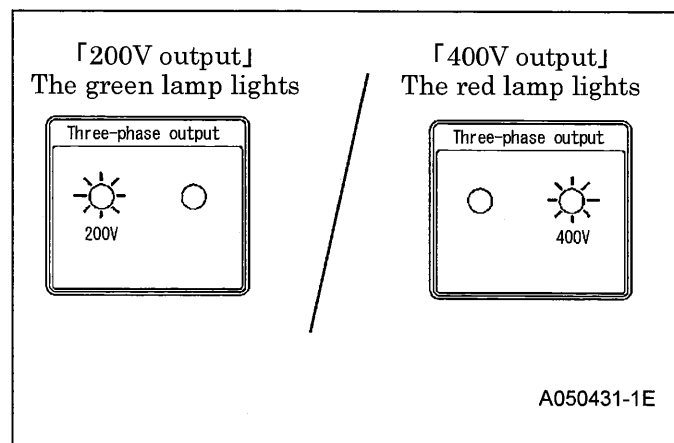

A050431-1E


4. Operation

4.8.2 Gauge Indication while Operating

- During normal operation, each indication of instruments is shown in the table below. Refer to the table for daily checks.

		Voltmeter (V)	Frequency meter (Hz)	Ammeter (A)	Monitor lamp					
					Engine oil pressure	Water temp.	Excessive rotation	Leak	Engine Air filter	Charge
Before Starting up	Starter switch (RUN)	0	0	0	● Off	● Off	● Off	● Off	● Off	☀ On
		SDG125S During Operation (Full load)	50Hz 200/ 380/400	50	289/ 152/144	● Off				
	60Hz 220/440	60	328/164							
SDG150S,AS During Operation (Full load)	50Hz 200/ 380/400	50	361/ 190/180							
	60Hz 220/440	60	394/197							
During Operation (Unload)	50Hz 200/ 380/400	52.5	0							
	60Hz 220/440	62.5								

- Be sure to check at times to see if gauges or each component of the unit are properly working, or if there is any air-leak, oil-leak, water-leak or fuel-leak etc.
- The table above gives standard values. They may vary slightly depending on the operating conditions and other factors.
- In single-phase load operation, check the current of U, V, and W phase with the ammeter, by turning the current selection switch. When each current is unbalanced, change load connections so that the current of U, V, and W, can be equally balanced. Also make sure that the current of each phase does not exceed the rated one.

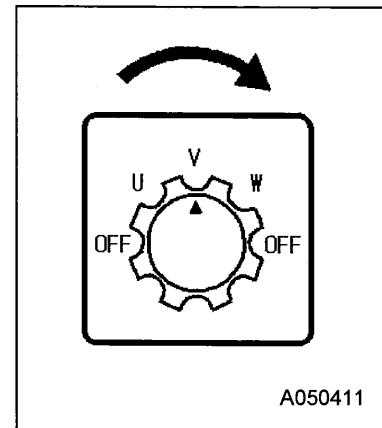

4.8.3 Panel light

- The instruments are provided with transmission type illuminators. Switch "ON" the panel light so that they may light on.
- When illumination is not necessary, turn "OFF" the light. (If the machine is always operated with the lamp switched "ON", the lamp life can be shortened.)

4.8.4 Stopping Procedures

< Procedure >

- ① Set the circuit-breaker on the instrument panel of the machine to "OFF" position.
- ② After about five minutes' cooling down operation, turn the starter switch to "STOP" position.

4. Operation

4.8.5 Operating Procedures when Engine Fails to Start up on First Attempt

- When the engine fails to start up even following the start-up procedures, do not keep the starter running, but set the starter switch back to “STOP” and wait about 30 seconds. Then, repeat the start-up procedure once again.
- If the repeated procedure does not allow the engine to run, the following causes are suspected. Therefore, check the following:
 - No fuel
 - Clogging of fuel filter
 - Clogging of filter inside the fuel air-bleeding electromagnetic pump
 - Discharge of battery (Low cranking speed)

4.8.6 Fuel Line Air Bleeding Device

If the unit runs out of fuel, bleed the air, according to the following procedures.

<Procedure>

- ① Replenish fuel.
- ② Turn the starter switch to “RUN” position.
Then the electric pump starts to automatically bleed air caught in fuel pipes.
- ③ Air bleeding will be completed within 20-30 seconds.

4. Operation

4.9 Parallel Operation

WARNING



- For load sharing, adjust the speed of each engine by turning speed control knob.
- Operate each generator at 70 ~ 80% of the rated capacity or less. A little difference of engine governor or cross current can cause overloading to one unit.
- When engine fuel shortage occurs or emergency stop device functions during parallel operation, generator becomes motor to forcefully drive engine. In this case, engine gets mal-lubricated and fails. Always watch the operation and should something abnormal occur, immediately shut down by using circuit breaker.
- If it is difficult to always watch the operation, make sure to equip the generator with a reverse current relay to activate circuit breaker to shut down engine. For details, contact our office.
- During parallel operation cross current may cause malfunction to a ground fault circuit interrupter of the generator. Therefore, install a ground fault circuit interrupter to the load, and do not connect the grounding terminal to the generator.

- As all these models are equipped with high precision parallel operation device (cross current prevention device), they can easily perform parallel operation. Such generators of same models and same capacity are better in efficiency for parallel operation.

4.9.1 Preparations for operation

WARNING

- Make sure to stop engine before carrying out wiring connection.
- When making wiring connection between generators and connecting to load, connection of same phase (U.V.W) between each generator as shown in the following wiring diagram.
- When selecting voltage, use same voltage for all generators. (See P4-5)
- Place the synchronous switch "1" to the position of "parallel operation".
- Switch OFF all the three-phase circuit breaker for all the generator.
- ※ Make sure that load main switch is OFF.

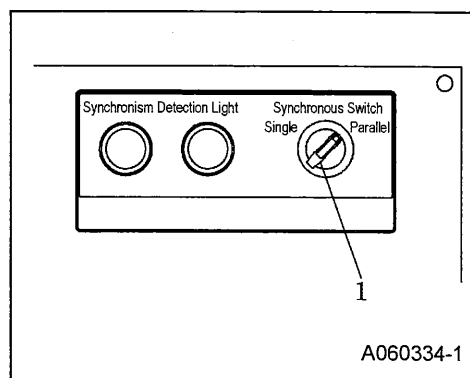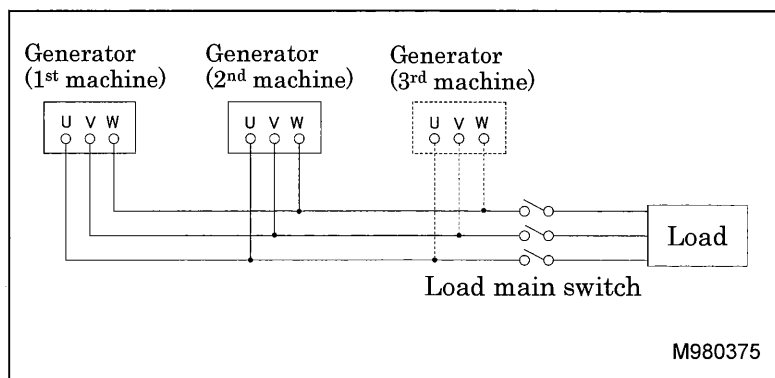


4. Operation

4.9.2 Operation

(Procedure)

- ① Start operation of each unit one by one.
- ② Make sure that “parallel operation” is switched on, and then adjust the voltage and frequency.
- ③ At first switch ON three phase circuit breaker and adjust speed control lever of the first machine so that the synchroscope may flicker as slowly as possible.
- ④ As soon as the two synchrosopes are gone out, switch ON the three phase circuit breaker to finalize synchronization.
- ⑤ In the same way as above, carry out synchronization for third machine and so on.

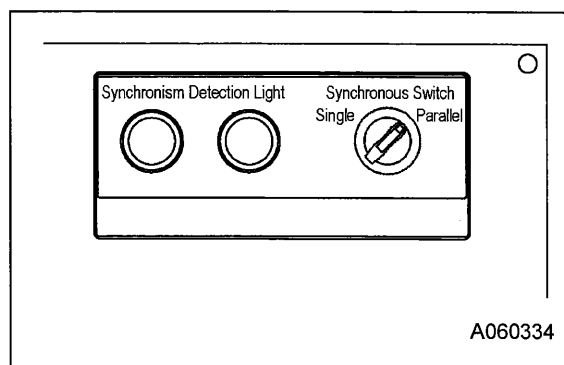

IMPORTANT

- In this case both machines are in no load and so the ammeters of both machines show 0 (zero). If ammeters show +plus, there is a cross current. Adjust all the voltage regulators so that the ammeters show 0 (zero).
- ⑥ Switch ON load switches. In this time if each load of each generator is unbalanced, adjust engine speed of each generator for load sharing.
 - At higher speed the load sharing of generator increases.
 - At lower speed the load sharing of generator decreases.

5. Periodic Inspection/Maintenance


5.1 Important Items at Periodic Inspection and Maintenance or after Maintenance

- The manual shows proper interval for periodic inspection and maintenance under normally operating conditions. Inspection and maintenance should be performed more often under extremely harsh conditions.

WARNING

Hang a "Now Checking and under Maintenance" tag

- Remove the starter key from the starter switch before starting inspection, and hang up a "Now Checking and under Maintenance" tag where it can be easily seen. The checker must keep the key during checking and maintenance.
- Remove the negative (-) side cable from the battery. If the above procedure is neglected, and should another person start operating the machine during check or maintenance, it could cause serious injury.
- Be sure to use appropriate tools for inspection and maintenance work. Inappropriate tools could cause unexpected injury.

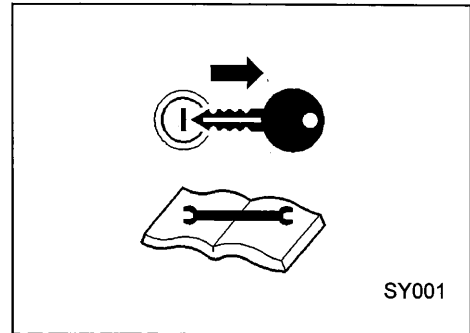

IMPORTANT

Precaution for check and maintenance


- Be sure to use recommended fuel, oil, grease, or antifreeze.
- Do not disassemble or adjust engine, compressor or part(s) for which inspection or maintenance is not referred to in this manual.
- Use genuine parts for replacement.
- Any breakdown, caused by using unapproved parts or by wrong handling, will be out of the scope of "WARRANTY".
- Check rotor and stator of generator body for any seizure of foreign matter, dust or dirt, and cable disconnection.
- Do not pour water or steam on electrical components.
- Place a container or a pan underneath the oil port to receive waste liquid so that such liquid cannot be spilled out on the floor or inside the machine.
- Be sure that no waste liquid is disposed of on the ground. Such waste on the ground, river or lake will cause serious environmental contamination. Be sure to follow the local regulations. If harmful material such as oil, antifreeze solution or filters are disposed of incorrectly, the responsible person should be punished by the authority.
- Observe local regulations when disposing of such toxic materials as oil, fuel, coolant (anti-freeze), filters, and battery etc.

5. Periodic Inspection/Maintenance

5.2 Daily Inspection and Keeping Operation Log

- Be sure to carry out daily inspection every morning before operation. See Chapter 4 “OPERATION” of the manual for the details of inspection.
- Pay attention to and carefully observe the following points during daily operation or inspection and maintenance work. If any trouble or abnormality is found, immediately investigate its cause and make repairs. If the cause is unknown or not traceable, or if the trouble involves a part or component not described in the manual, ask your nearest dealer for information.

- (a) Controls and instruments function properly.
- (b) Quantity and any leak of water, fuel, and oil or any contamination should be checked.
- (c) Appearance, abnormal noise or excessive heat should be checked.
- (d) Loose bolt or nut should be checked.
- (e) Any damage, wear or shortage of machine components and parts should be checked.
- (f) Performance of each part or component should be proper.

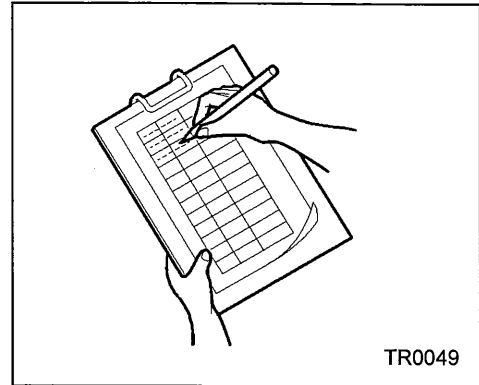

- Keep the operation log to record constant inspection of each component, so that trouble of the machine can be easily discovered and preventive measures can be taken.

It is very useful to record information such as frequency, temperature, current, maintenance items and replenishment of lubricant on a daily maintenance log.

5.3 Periodic Replacement of Parts

IMPORTANT

Use our genuine elements

- Air filter is a crucial component for the performance and the life of a unit.
Use genuine part for replacement.

- Part number changes upon modification. For replacement of parts, make sure whether the part number is correct or applicable.

Part Name	Part Number	Quantity
Engine oil filter	37438 08000	1
Fuel filter	43543 00400	1
Air filter element	32143 12500	1
Fuel air-bleeding electric pump filter (Including gasket)	HINO S2340-11750	1
Engine feed pump joint gasket	43531 00700	6
Belt	HINO 9001-49251	1

5. Periodic Inspection/Maintenance

5.4 Periodic Inspection List

Such items marked ○ shall be carried out by customers.

For the following items or clauses marked ●, contact our office nearby or distributor because technical knowledge is required.

The following table shows the intervals of inspection and maintenance under normal operation conditions. Inspection and maintenance should be done at either of the hour or the period mentioned in the remarks column, whichever comes earlier. This table is only for your reference. It is necessary to change maintenance interval according to sorts of load, and also environmental conditions.

* Refer to engine operation manual for inspection and maintenance of an engine.

(Unit : Hour)

Maintenance	Daily	50	250	500	1,000	Page	Remarks
Generator	Check ground of machine package and leakage relay.	○				4-14	
	Check of thermo-label on the stator.	○				4-14	
	Cleaning instruments in control panel	○				4-14	Cleaning should be done when needed.
	Check each instrument and monitor lamp.	○				4-17	
	Check insulation resistance.			○		5-5	Check it every 2 months
	Check of thermo-label on the rotor bearing.			○		5-6	Check it every 2 months
	Check leakage relay operation.			○		5-6	Check it every 2 months
	How to check thermal relay.			○		5-6	Check it every 2 months
Engine	Check engine oil level.	○				4-12	
	Check coolant level.	○				4-12	
	Check fuel.	○				4-13	
	Check sedimentor	○				4-13	
	Check belt tension.	○				4-14	In the case of NG, it exchanges.
	Change engine oil.		○ (First time)		○	5-4	
	Change engine oil filter.		○ (First time)		○	5-5	
	Check and clean clogging of air filter element.			○		5-7	Perform cleaning when the display lamp glows.
	Drain fuel tank.			○		5-7	
	Check battery electrolyte.			○		5-8	
	Check looseness in pipe connector terminals and tear in wiring.				○	5-8	Check it every 4months
	Check specific gravity of battery electrolyte				○	5-8	
	Change fuel filter.				○	5-8	
	Clean outside of radiator and intercooler.				○	5-8	Dirt condition cleans.
	Change fuel air-bleeding electromagnetic pump filter				○	5-9	
	Clean the strainer provided inside the engine feed pump.				○	5-9	
	Change air filter element				○	5-9	
	Change coolant. (LLC)				○	5-10	Replaced every 2 years
Check rubber hose.				○	5-10	Replaced every 2 years	
Check engine valve clearance.				●			
Clean inside the fuel tank.				●			

Note: The above intervals of inspection and maintenance are respectively based on the operation time of 125 hours of used per month and of 1,500 hours of use per year.

5. Periodic Inspection/Maintenance

5.5 Maintenance


5.5.1 Change Engine Oil

[At 50 hours for the first change and every 500 hours thereafter]

CAUTION


Caution in filling or draining engine oil

- When checking, replenishing, and draining the engine oil, be sure to wait 10 to 20 minutes after engine stops until it cools down.
- Engine oil is very hot and highly pressurized during or just after the operation. Hot oil could blow out and can cause injury.
- Never supply more engine oil than the proper level. Too much oil could cause white smoke out of the exhaust, and it can cause damage and accident to engine.

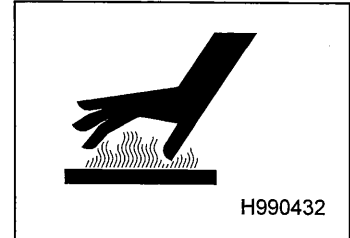

< Procedure >

- ① Loosen the drain plug "1" provided outside the machine.
- ② Open the drain valve "2" provided inside the machine to drain condensate.
- ③ After finishing drainage, close the drain valve "2" securely and install the drain plug "1" .
- ④ Supply engine oil through oil filler port "3" .
- ⑤ After finishing the oil supply, tighten the cap of oil filter port "3" firmly.

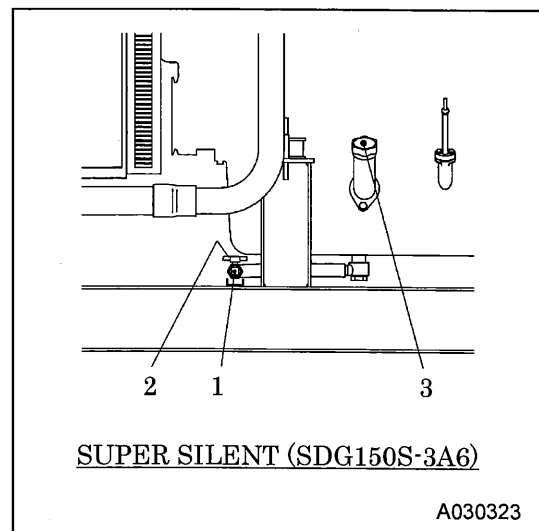


5. Periodic Inspection/Maintenance

5.5.2 Change Engine Oil Filter

[At 50 hours for the first change and every 500 hours thereafter]

< Procedure >

- ① When installing a new oil filter "1", spread oil over the packing "2", and then screw it in. When the packing touches the sealing surface, further tighten the filter by approximately two-thirds turn with a filter wrench.
- ② After the oil filter "1" is assembled, check if there are any oil leaks during operation. (See 5.3)

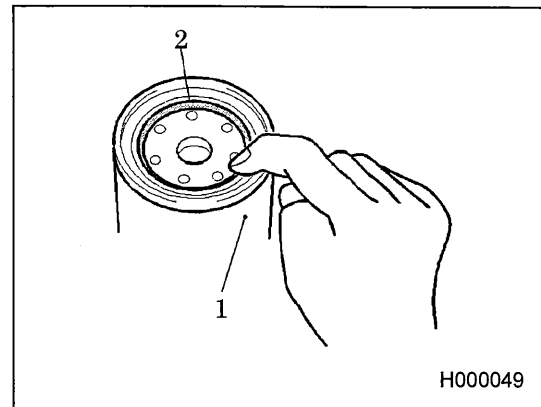

5.5.3 Check Insulation Resistance


[Every two months or every 250 hours]

IMPORTANT

- When the generator main unit has not been operated for a long time or rainwater has got inside the machine, be sure to measure the insulation resistance. If it is reduced to lower than $1M\Omega$, it could cause an electrical leakage or a fire. Dry up the generator main unit until the resistance exceeds $1M\Omega$, then start operating.
- Make sure that no foreign matters are meshed between rotor and stator etc, and also check for dust or dirt because these things such as humidity, oil and dust sticking to the unit deteriorate the insulation.
- After cleaning the main part of the generator as disposal of insulated recovery, there is a method of putting an electric bulb into the inside of the main part of the generator main unit, or sending a hot wind into an inside. Under the present circumstances, it is more effective if the whole main part of the generator main unit is dried in the state where it covered with the sheet. However, please let the bending way and average dry local overheating as notes. Coil surface temperature should not exceed $80\sim 90^{\circ}C$. Even if it carries out the above disposal, when you do not recover, contact us directly or our distributors.

< Procedure >

- ① Remove the load side cable from the output terminal board.
- ② Remove the AVR connector "1" inside the machine control panel.
- ③ Switch ON the circuit breaker "2", measure each insulation resistance between the terminals U. V. W terminal and bonnet.
- ④ If insulation resistance when measured with a 500V megger tester is over $1M\Omega$, it is good.

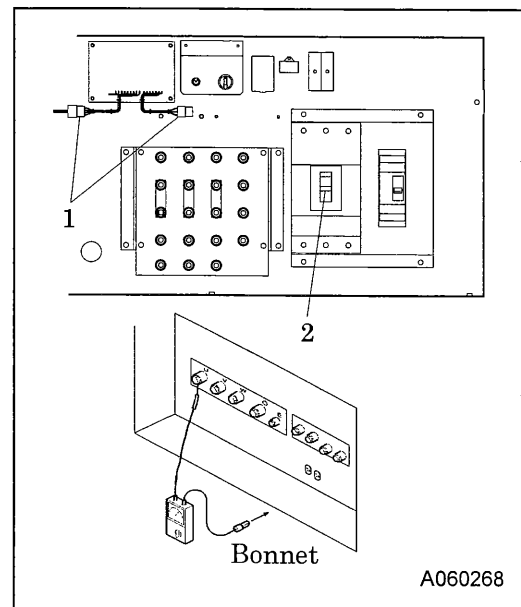

5. Periodic Inspection/Maintenance

5.5.4 Check Leakage Relay Operation

[Every 2 months or every 250 hours]




WARNING

- Never attempt to test the leakage relay by way of human body.
- In case the leakage relay has tripped due to leakage, always investigate the cause to remove it.

Regularly check the relay operation for safety.

<Procedure>

- ① Start up the machine according to the procedure in 4.8.1.
- ② Turn the circuit breaker (dedicated to single phase) and the other breaker to "ON".
- ③ Push the leakage relay test button "1". When the red lamp on the leakage relay and the "LEAKED" lamp "2" on the instrument panel glow, the relay function is normal if the circuit breaker is switched off.
- ④ To set the breaker ON once again, push the leakage relay reset button "3" and set the breaker lever back to the "OFF" position.

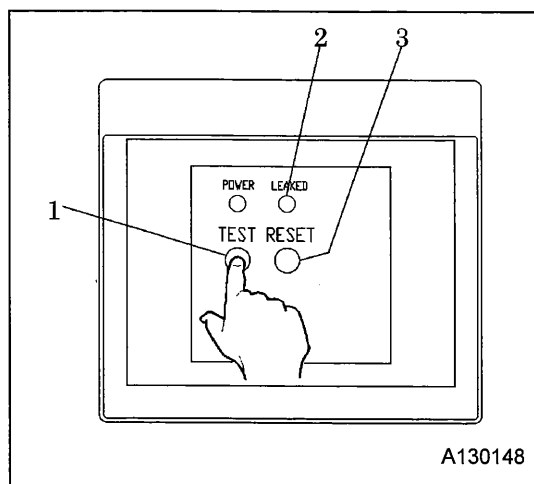


A130148

5.5.5 Check of thermo-label on the rotor bearing

[Every 2 months or every 250 hours]

- Thermo-label on the rotor bearing irreversibly changes its color from white to blue by reaching or exceeding 80°C. Be sure to check the bearing for backlash and noise.
- Replace thermo-label, if it have changed the color once.
- When replace it, contact our office nearby or distributor.

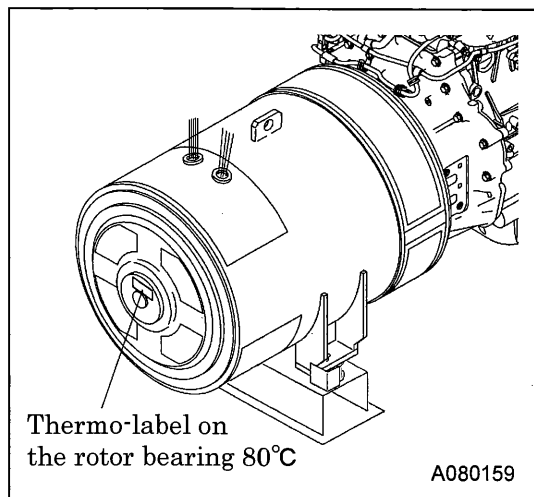

Thermo-label on
the rotor bearing 80°C


A080159

5.5.6 How to check thermal relay

[Every 2 months or every 250 hours]

<Procedure>

- ① Turn the starter switch to ON.
- ② Turn the circuit breaker (dedicated to single phase) and the other breaker to "ON".
- ③ Push the test lever of the thermal relay in the "arrow" direction, and then both circuit breakers can "TRIP".
- ④ It is possible to return the circuit breakers to "ON" position again by placing the lever of the breakers to "OFF" position again.

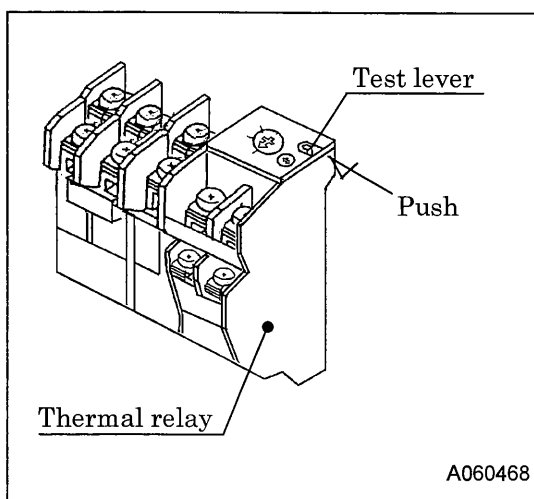

Thermal relay

A060468

5. Periodic Inspection/Maintenance

5.5.7 Check and Clean Clogging of Air Filter Element

[Every 250 hours]

IMPORTANT


Be sure to properly clean air filter element

- When an element that is clogged or has holes or cracks is used, dust or foreign material will get in the engine. This causes accelerated wear in each sliding part of the engine. Be sure to make daily check and cleaning so that the life of the engine will not be shortened.

- When the air filter monitor lamp glows, clean the air filter.

< Procedure >


- ① After removing the cap "1" by loosening its latch "2", clean its interior properly.
- ② Remove the element "3", and clean it.
- ③ When installing the cap "1" after finishing the cleaning job, push the element into the case "4" surely by hand, and then make sure that the latch "2" fixing the cap surely hooks the case "4". Finally tighten it.
- ④ If the element is found heavily dusty, replace it with a new one. (See 5.3)

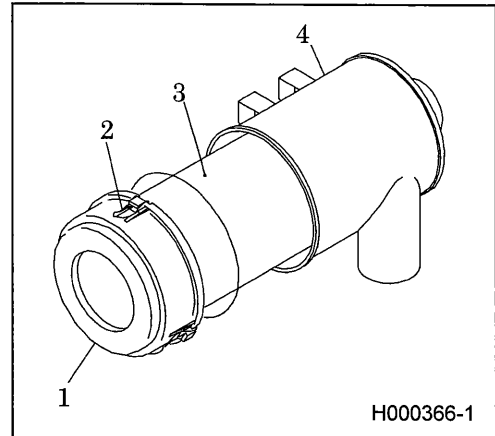

5.5.8 Drain Fuel Tank

[Every 250 hours]

- Fuel tank drain is loosen the drain valve "1" located outside the frame to discharge condensate left in the tank.
- When completely drained, firmly close the drain valve "1".
- Dispose of condensate according to the designated regulations.

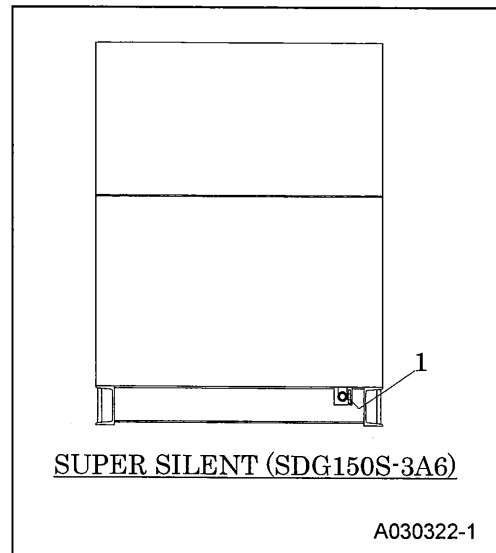

5. Periodic Inspection/Maintenance

5.5.9 Check Battery electrolyte and specific gravity of battery electrolyte

[Battery electrolyte: every 250 hours]

[Specific gravity of battery electrolyte : every 500 hours]

If there to be a problem in starting an engine due to a flat battery, carry out the checks by following the procedures below:

(1) Ordinary type battery:

Measure specific gravity of battery electrolyte, and if it shows below 1.24, recharge the battery immediately. (See 6.1)

(2) Enclosed type battery:

Check the indicator on top surface of the battery.

If the indicator shows that charge is needed, recharge the battery immediately.

5.5.10 Check Wiring of Each Part

[Every 4 months or every 500 hours]


Check each wiring for any loose connection, damage, disconnection, and short circuit.

5.5.11 Change Fuel Filter

[Every 500 hours]

< Procedure >


- ① Take out the cartridge by using a filter wrench.
- ② After coating fuel on the new cartridge "1" packing "2" , screw it in. (See 5.3)
- ③ When the packing "2" touches the seal face, tighten it by approximately two-thirds turn using a filter wrench.
- ④ Bleed the air of fuel. (See 4.8.6)
- ⑤ After installing a fuel filter, check for fuel leakage during operation.

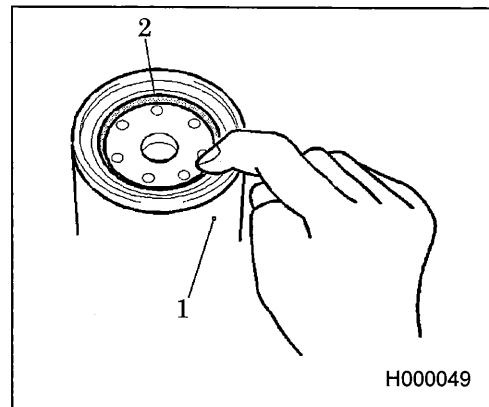

5.5.12 Clean Outside of Radiator·Inter Cooler

[Every 500 hours]

- When the fin tubes "3" of radiator "1" and inter cooler "2" are clogged by dust or other foreign materials, the heat exchange efficiency drops and this will raise coolant temperature. These tubes and fins should be cleaned depending on the state of dirt inside the tubes even before maintenance schedule. (Only these models SDG150S,AS-3A6 are equipped with an inter cooler "2".)
- Do not use high pressure washer for washing to prevent fin tubes "3" from being damaged.
- When the unit is used, installed near seaside and on boat board, clean the radiator using fresh water more times than once a month.

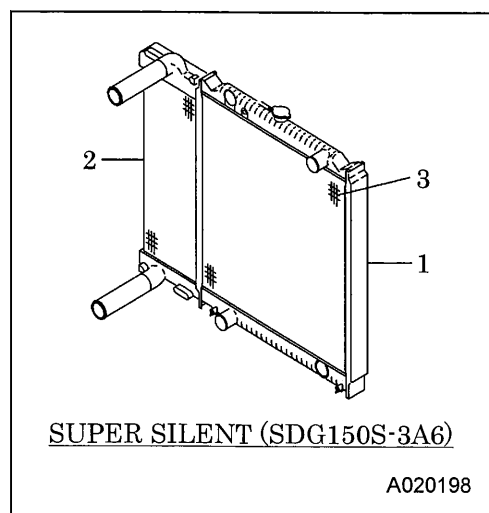


5. Periodic Inspection/Maintenance

5.5.13 Change fuel air-bleeding electromagnetic pump filter

[Every 500 hours]


- Turning the cap "1" counterclockwise to remove it, the filter "2" (paper type) inside and gaskets "3" will come off. So replace them. (See 5.3.)
- As the fuel inside spills out when it is removed, prepare a fuel receiver.

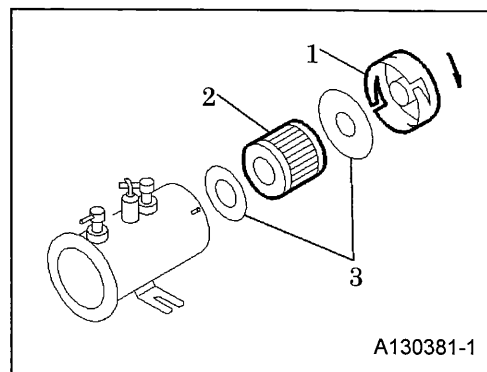

5.5.14 Clean the strainer provided inside the engine feed pump

[Every 1,000 hours]

- Periodically remove the strainer "1" inside the feed pump, and clean it.
- Remove the strainer "1" by loosening the joint bolt "2" and clean it with diesel fuel oil, and also using high air pressure blow. At this time be sure to replace gasket. (See 5.3.) Then after finishing all cleaning jobs, install it again in reverse steps.

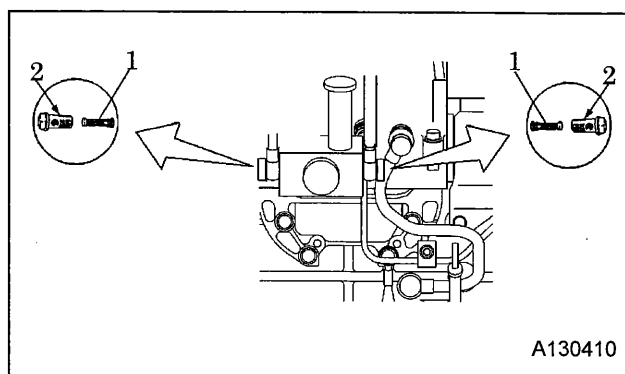

5.5.15 Change Air Filter Element

[Every 1,000 hours]


IMPORTANT

Be sure to properly clean air filter element

- When an element that is clogged or has holes or cracks is used, dust or foreign material will get in the engine. This causes accelerated wear in each sliding part of the engine. Be sure to make daily check and cleaning so that the life of the engine will not be shortened.

<Procedure>

- ① After removing the cap "1" by loosening its latch "2", clean its interior properly.
- ② Remove the element "3" and then replace it with a new one. (See 5.3)
- ③ When installing the cap "1" after replacing it, properly push the element into the case "4" by hand and then make sure that the hooks for fixing the cap are surely set. Finally tighten it.

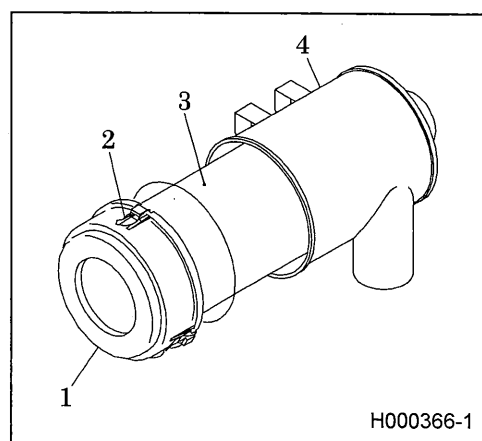

5. Periodic Inspection/Maintenance

5.5.16 Change Coolant


[Every 2 years]



CAUTION



Upon changing coolant

- Be sure to stop the machine and loosen the radiator cap slowly, after the coolant water is sufficiently cooled and the inner pressure is released, then take the cap off.
If the following procedures are neglected, the radiator cap could be blown by the internal pressure or hot moisture air be blown out to cause burning. Therefore, make sure to carry out them without fail.
- LLC (Antifreeze) is a toxic material.
- When a person has drunk LLC (Antifreeze) by accident, make him vomit and make him see a doctor immediately.
- When a person gets LLC (Antifreeze) in his eyes, wash the eyes with clean running water and make him see a doctor immediately.
- When LLC (Antifreeze) is stored, put it in a container with an indication saying "LLC (Antifreeze) inside" and seal it up, then Keep it in a place away from children.
- Beware of flames.

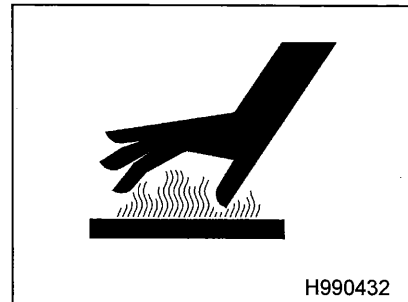

< Procedure >

- ① To drain coolant, remove the radiator cap "1", then loosen the drain valve "2".
- ② Be sure to also unfasten the drain plug "3" on the engine cylinder block for drainage.
- ③ When the coolant is completely drained out, close each drain valve "2" and drain plug "3", and supply new coolant from the filler port of radiator "4".
(In case of SDG150AS, remove the cover "5" on the top of the radiator by loosening the bolts "6" and then remove the rubber cap "7" for supplying coolant. See the right figure.)
- ④ After changing the coolant, run the engine under unload operation for 2 to 3 minutes, then stop it. Check the coolant level again and replenish it if necessary.

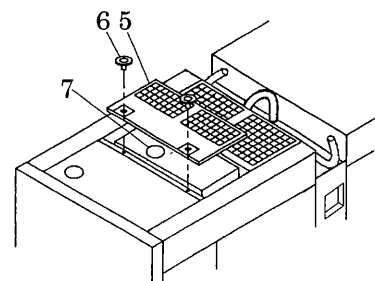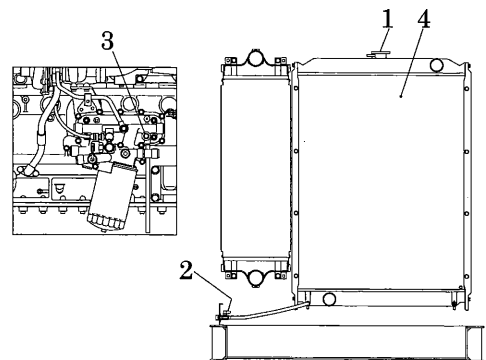

A020239-1

ULTRA SUPER SILENT (SDG150AS-3A6)

5.5.17 Check Rubber hose

[Every 2 years or every 1,000 hours]

- Rubber hoses (for air filter, radiator, fuel line, and condensate etc.) become hardened or deteriorated, replace them even before the specified hours or periodical intervals.
- Ask your nearest dealer for its replacement.

5. Periodic Inspection/Maintenance

5.6 Periodical Load Test to be Performed

[Check and inspection upon each occurrence of the following phenomena]

When a diesel engine driven generator is continuously operated with less than 30% load or no load for a long time, carbon will be stuck inside exhaust pipe, exhaust muffler and engine body and also unburned fuel will come out from connected portion of exhaust pipe and outlet port of exhaust muffler. If it is continuously operated under the conditions, the fuel which comes out can ignite and it could cause a fire.

Further, carbon sticking and carbon accumulated could cause power drop of the engine and also it could cause overheating to the engine, resulting a serious damage to the engine. In case that this phenomena occurs, eliminate the carbon accumulated by burning it during the operation with a load burdened until the exhaust gas becomes almost clear.

(For load current, refer to the following table as a standard value.)

CAUTION

- In case of load operation, increase load factor, checking the conditions of exhaust.
Carefully perform load operation, watching the surroundings because it could sometimes cause sparks.

Model		SDG125S-3A6				SDG150S,AS-3A6			
Frequency	Hz	50		60		50		60	
Rated voltage	V	200	400	220	440	200	400	220	440
Load current	A	240	120	270	135	290	145	320	160



6. Maintenance/Adjustment

6.1 Maintenance of Battery

⚠ DANGER

Handling battery


- Keep flames away from battery.
- Battery may generate hydrogen gas and may explode. Therefore, recharging should be done at a well-ventilated place.
- Do not spark near the battery nor light a match, nor bring lit cigarette and match close to the battery.
- Do not check the battery by short-circuiting the positive and negative terminals with a metallic piece.
- Never operate the machine nor charge the batteries with the battery liquid level being kept lower than the "LOWER" level. Continuing operation at this lower level will cause deterioration of such parts as pole plates etc., and also it may cause explosion as well as reduction of battery life. Add distilled water so that the liquid level may reach the middle level between the "UPPER" and "LOWER" level without any delay.
- Do not charge the frozen battery. Otherwise it may explode. If the battery is frozen, warm it up until the battery temperature becomes 16°C to 30°C.
- Battery electrolyte is dilute sulfuric acid. In case of mishandling, it could cause skin burning.
- Wear protective gloves and safety glasses when handling a battery.
- When such battery electrolyte contacts your clothes or skin, wash it away with large amount of water immediately.
- If the battery electrolyte gets into your eyes, wash it away immediately with plenty of water and see a doctor at once, because it is feared that eyesight might be lost.
- Dispose of battery, observing local regulations.

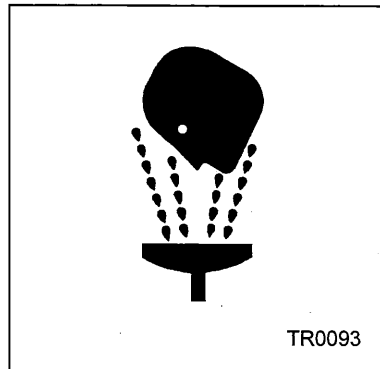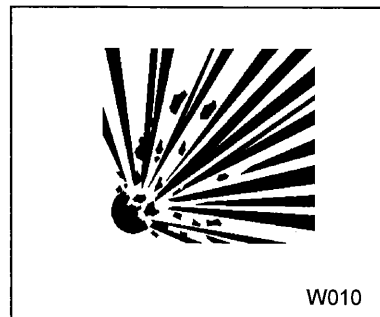

6. Maintenance/Adjustment

6.1.1 Charge Battery

- Disconnect the cable between battery and the unit, and charge the battery with a 12 V battery charger. Do not charge two batteries at the same time.
- Be sure not to connect (+) and (-) terminals backwards.
- Be sure to read the operation manual of the battery charger to know if it is applicable, before using it.

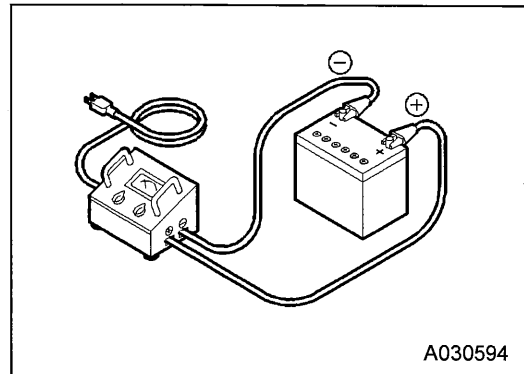

6.1.2 How to Use Booster Cable




Do not connect the cable reversely

- When a booster cable has to be used or when cables are connected again after an battery is replaced, be careful not to connect (+) and (-) terminals backwards. Such wrong-connection will cause spark and damage to each component.

< Procedure for using a booster cable >

- ① Stop the engine.
- ② Connect one end of the (+) cable to the (+) terminal of the machine battery.
- ③ Connect the other end of the (+) cable to the (+) terminal of the external battery.
- ④ Connect one end of the (-) cable to the (-) terminal of the external battery.
- ⑤ Connect the other end of the (-) cable to the engine block of the machine.
- ⑥ Start up the engine.
- ⑦ Disconnect the booster cable by following the procedure back in the reverse order.

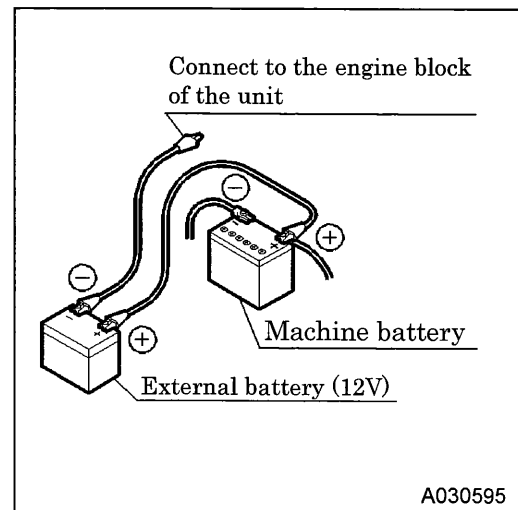

6. Maintenance/Adjustment

6.2 Troubleshooting

- Should any trouble occur during operation, do not leave it. Investigate the cause and take appropriate measures.
- Read the manual carefully and fully understand what to do in case of trouble.
- The better you understand the construction and function of the unit, the faster you can find a problem and solution.
- This chapter describes the state, cause and countermeasures of important troubles in detail:

Symptom	Cause	Counter measures
Starter does not rotate. Low starter revolution speed even when starting.	(1) Battery malfunction	Check Battery → Charge/Change
Starter rotates but engine does not start up.	(1) Fuel filter clogging (2) Filter of fuel air-bleeding electric pump clogging (3) Fuel shut-off solenoid malfunction (4) No diesel fuel oil (5) Air mixing in fuel pipings	Disassemble, clean, and change Change filter Check fuse Change solenoid Check connector Replenish fuel Bleed air
Engine oil pressure drop monitor lamp glows.	(1) Engine oil shortage (2) Engine oil filter clogging (3) Oil pressure switch malfunction (4) Loosened or disconnected wiring, or connector	Replenish fuel Change Change Check/repair
Coolant temperature rise monitor lamp glows.	(1) Radiator clogging (2) Faulty thermostat (3) Faulty coolant temperature switch (4) Shortage of coolant (5) Slip of belt (6) Looseness, disconnection of wiring or connectors	Clean Change Change Replenish Adjust tension Check/repair
Excessive rotation monitor lamp glows.	(1) Trouble of engine governor	Repair
Leakage Indicator lamp glows.	(1) Leakage on generator side (2) Leakage on load side (3) Leakage on connecting cable (4) Defective leakage relay	Check/repair Check/repair Check/repair Check/repair
Recharging monitor lamp glows.	(1) Alternator problem (2) Looseness, disconnection of wiring or connector	Check/change Check/repair
The monitor lamp for air filter clogging flickers.	(1) Air filter clogging	Clean

6. Maintenance/Adjustment

Symptom	Cause	Counter measures
Even when operated at a rated speed, no voltage or too low voltage generated.	(1) Faulty voltmeter (2) Poor tightening of terminals (3) Broken or short-circuited winding of generator main unit (4) Faulty AVR (5) Faulty silicon rectifier (mounted on generator main unit rotor) (6) Faulty exciter (7) Broken or short-circuited circuit to exciter field winding (8) AVR frequency selection switch is not set to meet the frequency to be operated. (9) Function circuit protector (CP) for AVR protection	Check/change Check/repair Check/repair Check/change Check/change Check/repair Check/repair Check/select Reset
Too high voltage generated when set at the rated frequency (50Hz/60Hz), Voltage will not drop even when the voltage regulator controlling knob is turned.	(1) Loosened or disconnected wiring, or connector to AVR (2) Faulty AVR (3) Broken wire or poor contact of AVR variable resistor	Check/repair Check/change Repair or change
Unstable voltage generation	(1) Poor tightening of each terminal (2) Faulty AVR (3) Function circuit protector (CP) for AVR protection	Check/repair Check/change Reset

- Please contact your nearest dealer if you find it difficult to repair by yourselves.
- Please refer to the engine operation manual for troubles concerning the engine.

7. Storage of the Machine

7.1 Preparation for Long-term Storage

When the machine is left unused or not operated longer than half a year (6 months), store it at the dry place where no dust exists after the following treatments have been done to it.

- Put the machine in a temporary cabin if it is stored outside. Avoid leaving the machine outside with a sheet cover directly on the paint for a long time, or this will cause rust to the machine.
- Perform the following treatments at least once every three months.


<Procedure>

- ① Discharge existing lubricant from the engine oil pan. Pour new lubricant in the engine to clean its inside. After running it for a while, drain it again.
- ② Spread lubricant on each moving part.
- ③ Completely charge the battery and disconnect grounding wires. Remove the battery from the machine, if possible, and store it in a dry place. (Charge the battery at least once every month.)
- ④ Discharge coolant and fuel from the machine.
- ⑤ Seal air-intake port of engine and other openings like the muffler with a vinyl sheet, packing tape, etc., to prevent moisture and dust from getting in the machine.
- ⑥ Measure the insulation resistance of the generator, and make sure that it is more than $1M \Omega$.
(See 5.5.3)
- ⑦ Be sure to repair any trouble and maintain the machine so that it will be ready for the next operation.

CAUTION

- When stacking up the machines for storage, only two machines stacking is acceptable. The mass of the lower machine should be larger than that of the upper one.
- Select a leveled floor with sufficient strength.
- Before stacking the machines up, check the machine for deformation of bonnet, looseness or missing of bolts, and other parts.
- When stacking them, be sure to securely fix them as shown in the figure so that the balanced weight is applied to each squared lumber for preventing a sideslip or a collapse.
- Never operate the machines with stacking conditions. It is very dangerous.
- Machines stacked could fall down due to sideslip or collapse when an earthquake occurs. Therefore, safety should be sufficiently considered for surroundings of storage places.

Stacking up box type machines

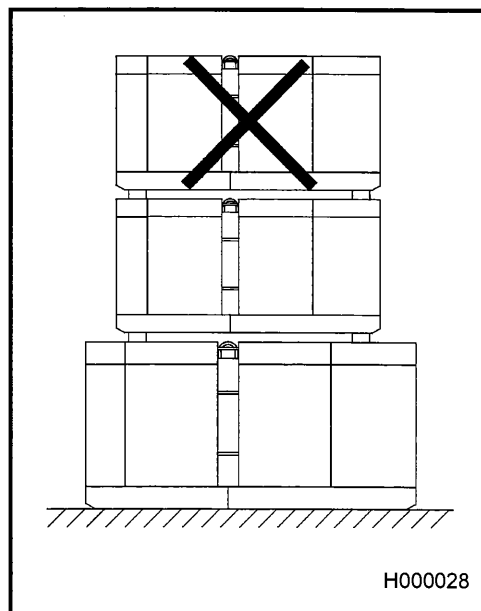

8. Specifications

8.1 Specifications

Model		SUPER SILENT (SDG125S-3A6)				
Specifications		Dual Voltage Type				
Generator	Exciting system		Brushless			
	Phase number		Three-phase, four-wire system			
	Power factor	%	80			
	Frequency	Hz	50	60		
	Rated output	kVA	100		125	
	Rated output	kW	80		100	
	Voltage	V	200	380/400	220	440
	Current	A	289	152/144	328	164
	Single phase output	Voltage	V	100		110
		Exclusive terminal	kVA	10×2		11×2
Outlet		kVA	1.5		1.65	
Engine	Model		HINO J08C-UD			
	Type		Water-cooled, 4 cycle, direct-injection type with turbo-charger & charge air cooler			
	Number of cylinders		6			
	Total displacement	L	7.961			
	Rated output	kW	96.3	112.5		
	Revolution per minute	min ⁻¹	1,500		1,800	
	Lubricating oil capacity	L	24.5			
	Coolant capacity (including radiator)	L	22			
	Battery		95D31R (24V)			
	Fuel tank capacity	L	250			
Weight • Mass	Overall length	mm	2,990			
	Overall width	mm	1,180			
	Overall height	mm	1,480			
	Net dry mass (weight)	kg	2,050			
	Operating mass (weight)	kg	2,300			


8. Specifications

Model		SUPER SILENT (SDG150S-3A6)				ULTRA SUPER SILENT (SDG150AS-3A6)					
Specifications		Dual Voltage Type									
Generator	Exciting system		Brushless								
	Phase number		Three-phase, four-wire system								
	Power factor	%	80								
	Frequency	Hz	50	60	50	60					
	Rated output	kVA	125	150	125	150					
	Rated output	kW	100	120	100	120					
	Voltage	V	200	380/400	220	440	200	380/400	220	440	
	Current	A	361	190/180	394	197	361	190/180	394	197	
	Single phase output	Voltage	V	100	110	100	110				
		Exclusive terminal	kVA	10×2	11×2	10×2	11×2				
Outlet		kVA	1.5	1.65	1.5	1.65					
Engine	Model		HINO J08C-UD								
	Type		Water-cooled, 4 cycle, direct-injection type with turbo-charger & charge air cooler								
	Number of cylinders		6								
	Total displacement	L	7.961								
	Rated output	kW	118	140	118	140					
	Revolution per minute	min ⁻¹	1,500	1,800	1,500	1,800					
	Lubricating oil capacity	L	24.5								
	Coolant capacity (including radiator)	L	22								
	Battery		95D31R (24V)								
	Fuel tank capacity	L	250					265			
Weight • Mass	Overall length	mm	2,990				3,200				
	Overall width	mm	1,180				1,200				
	Overall height	mm	1,480				1,630				
	Net dry mass (weight)	kg	2,180				2,590				
	Operating mass (weight)	kg	2,430				2,850				

8. Specifications

8.2 Outline drawing


SUPER SILENT (SDG125S-3A6)

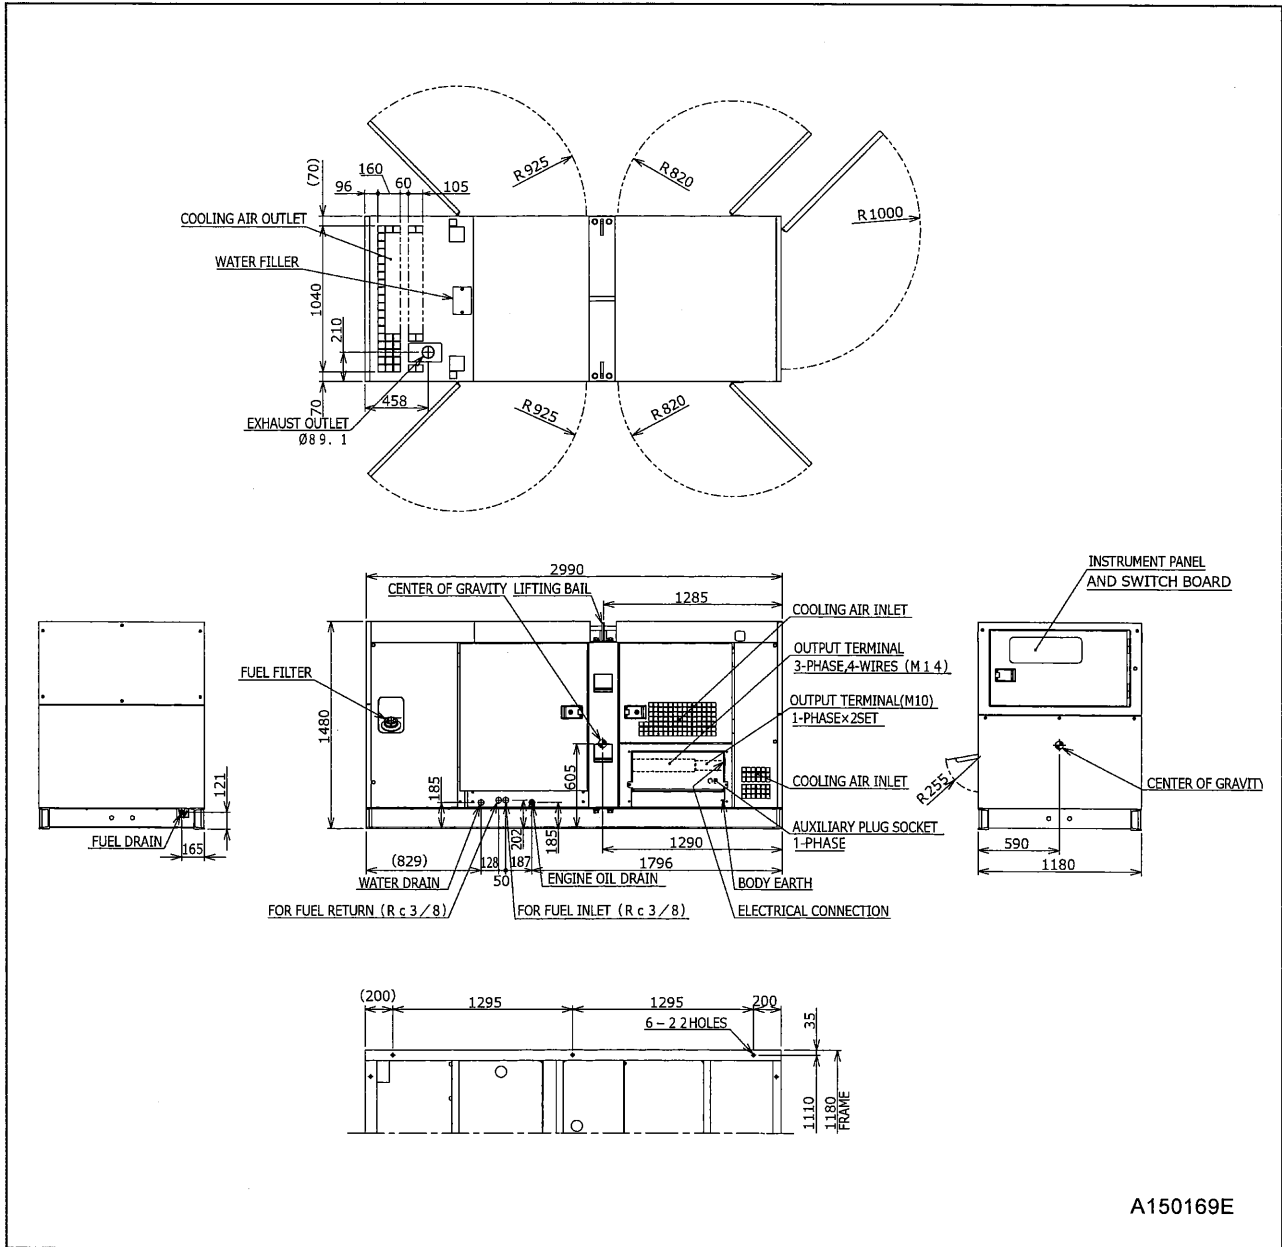

A150169E

8. Specifications


SUPER SILENT (SDG150S-3A6)

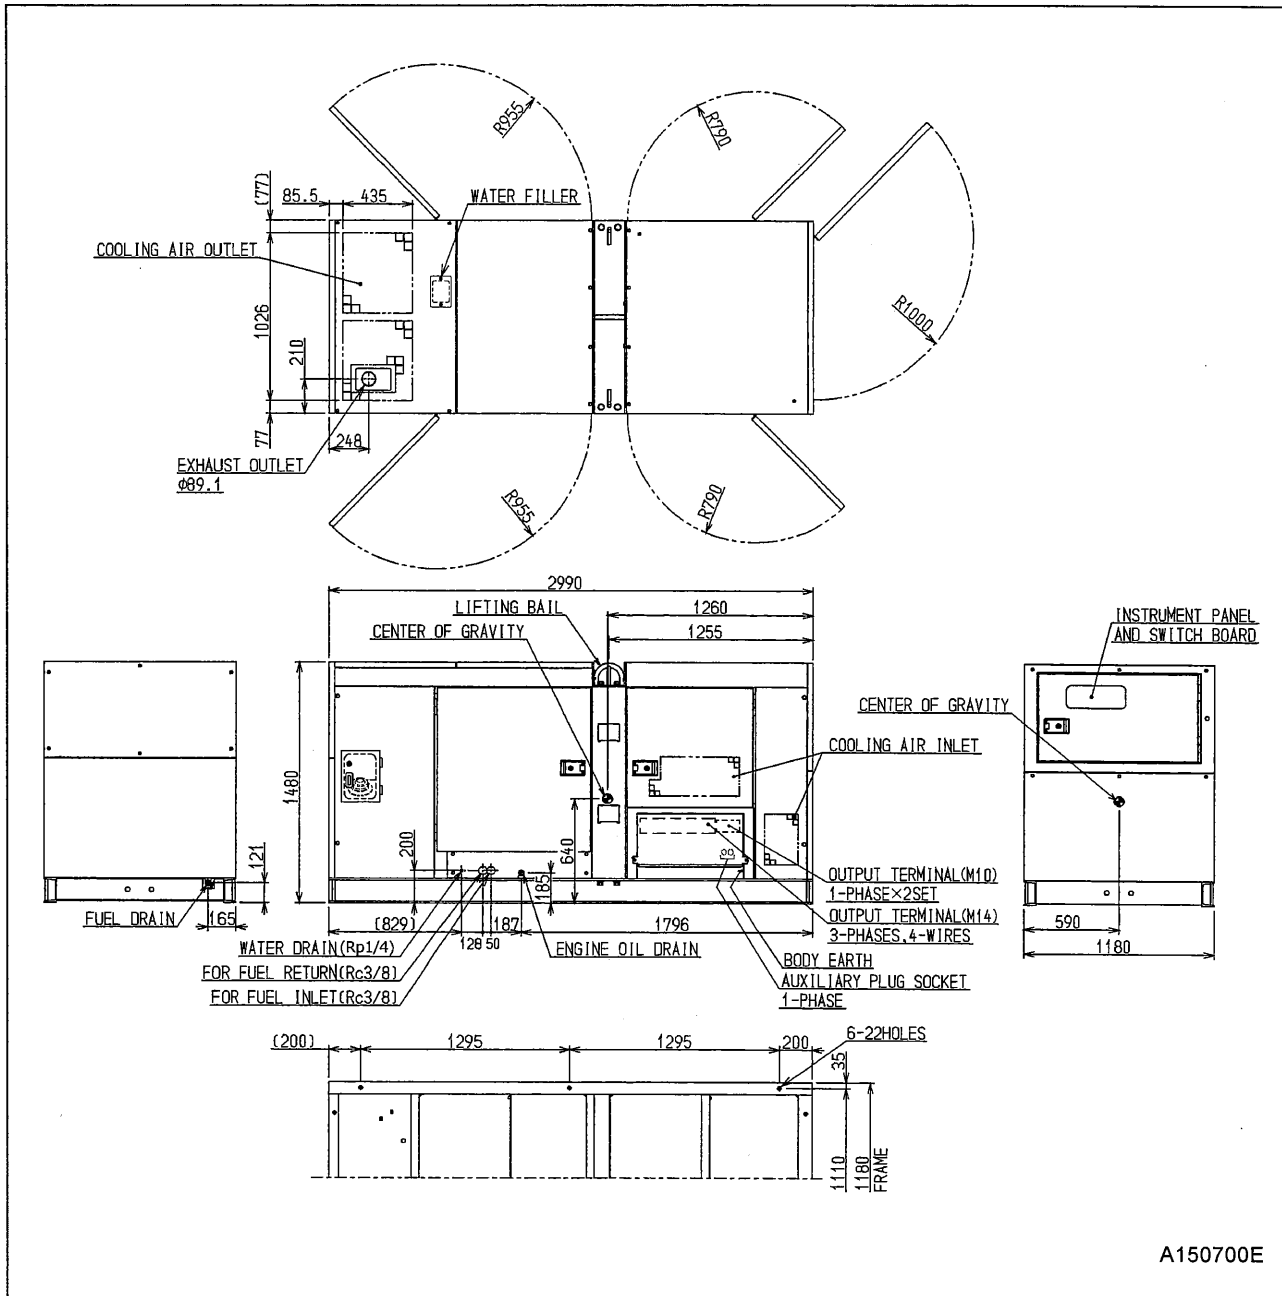

A150700E

8. Specifications


ULTRA SUPER SILENT (SDG150AS-3A6)

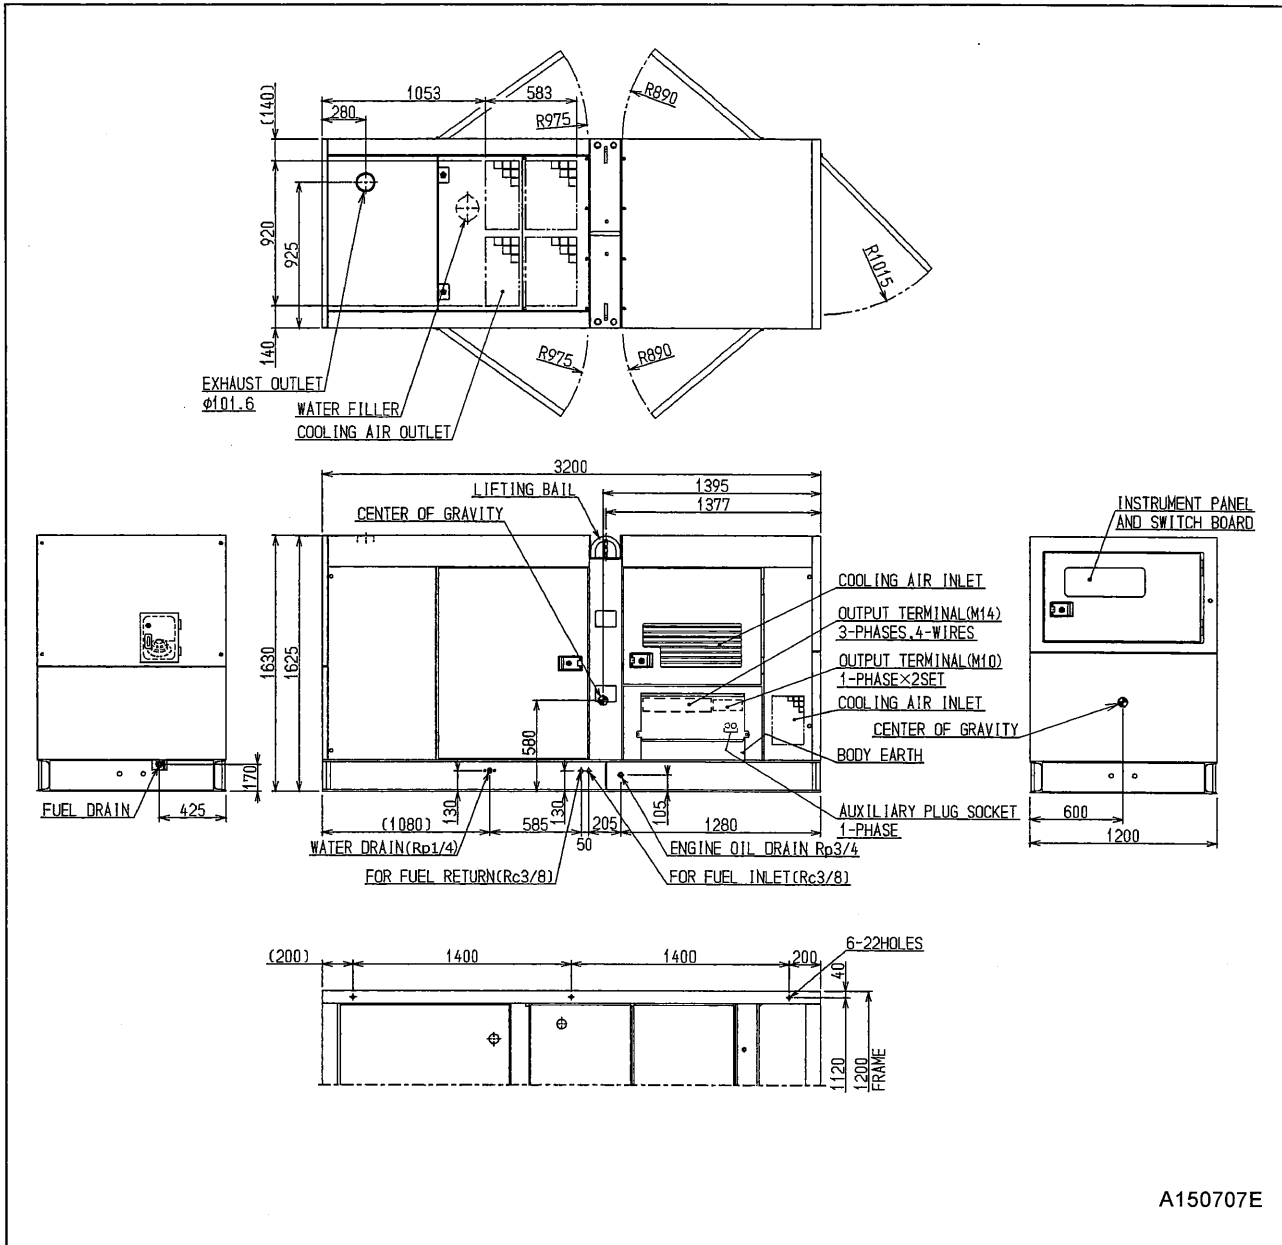

A150707E

9. Wiring Diagram

9.2 Engine Wiring Diagram

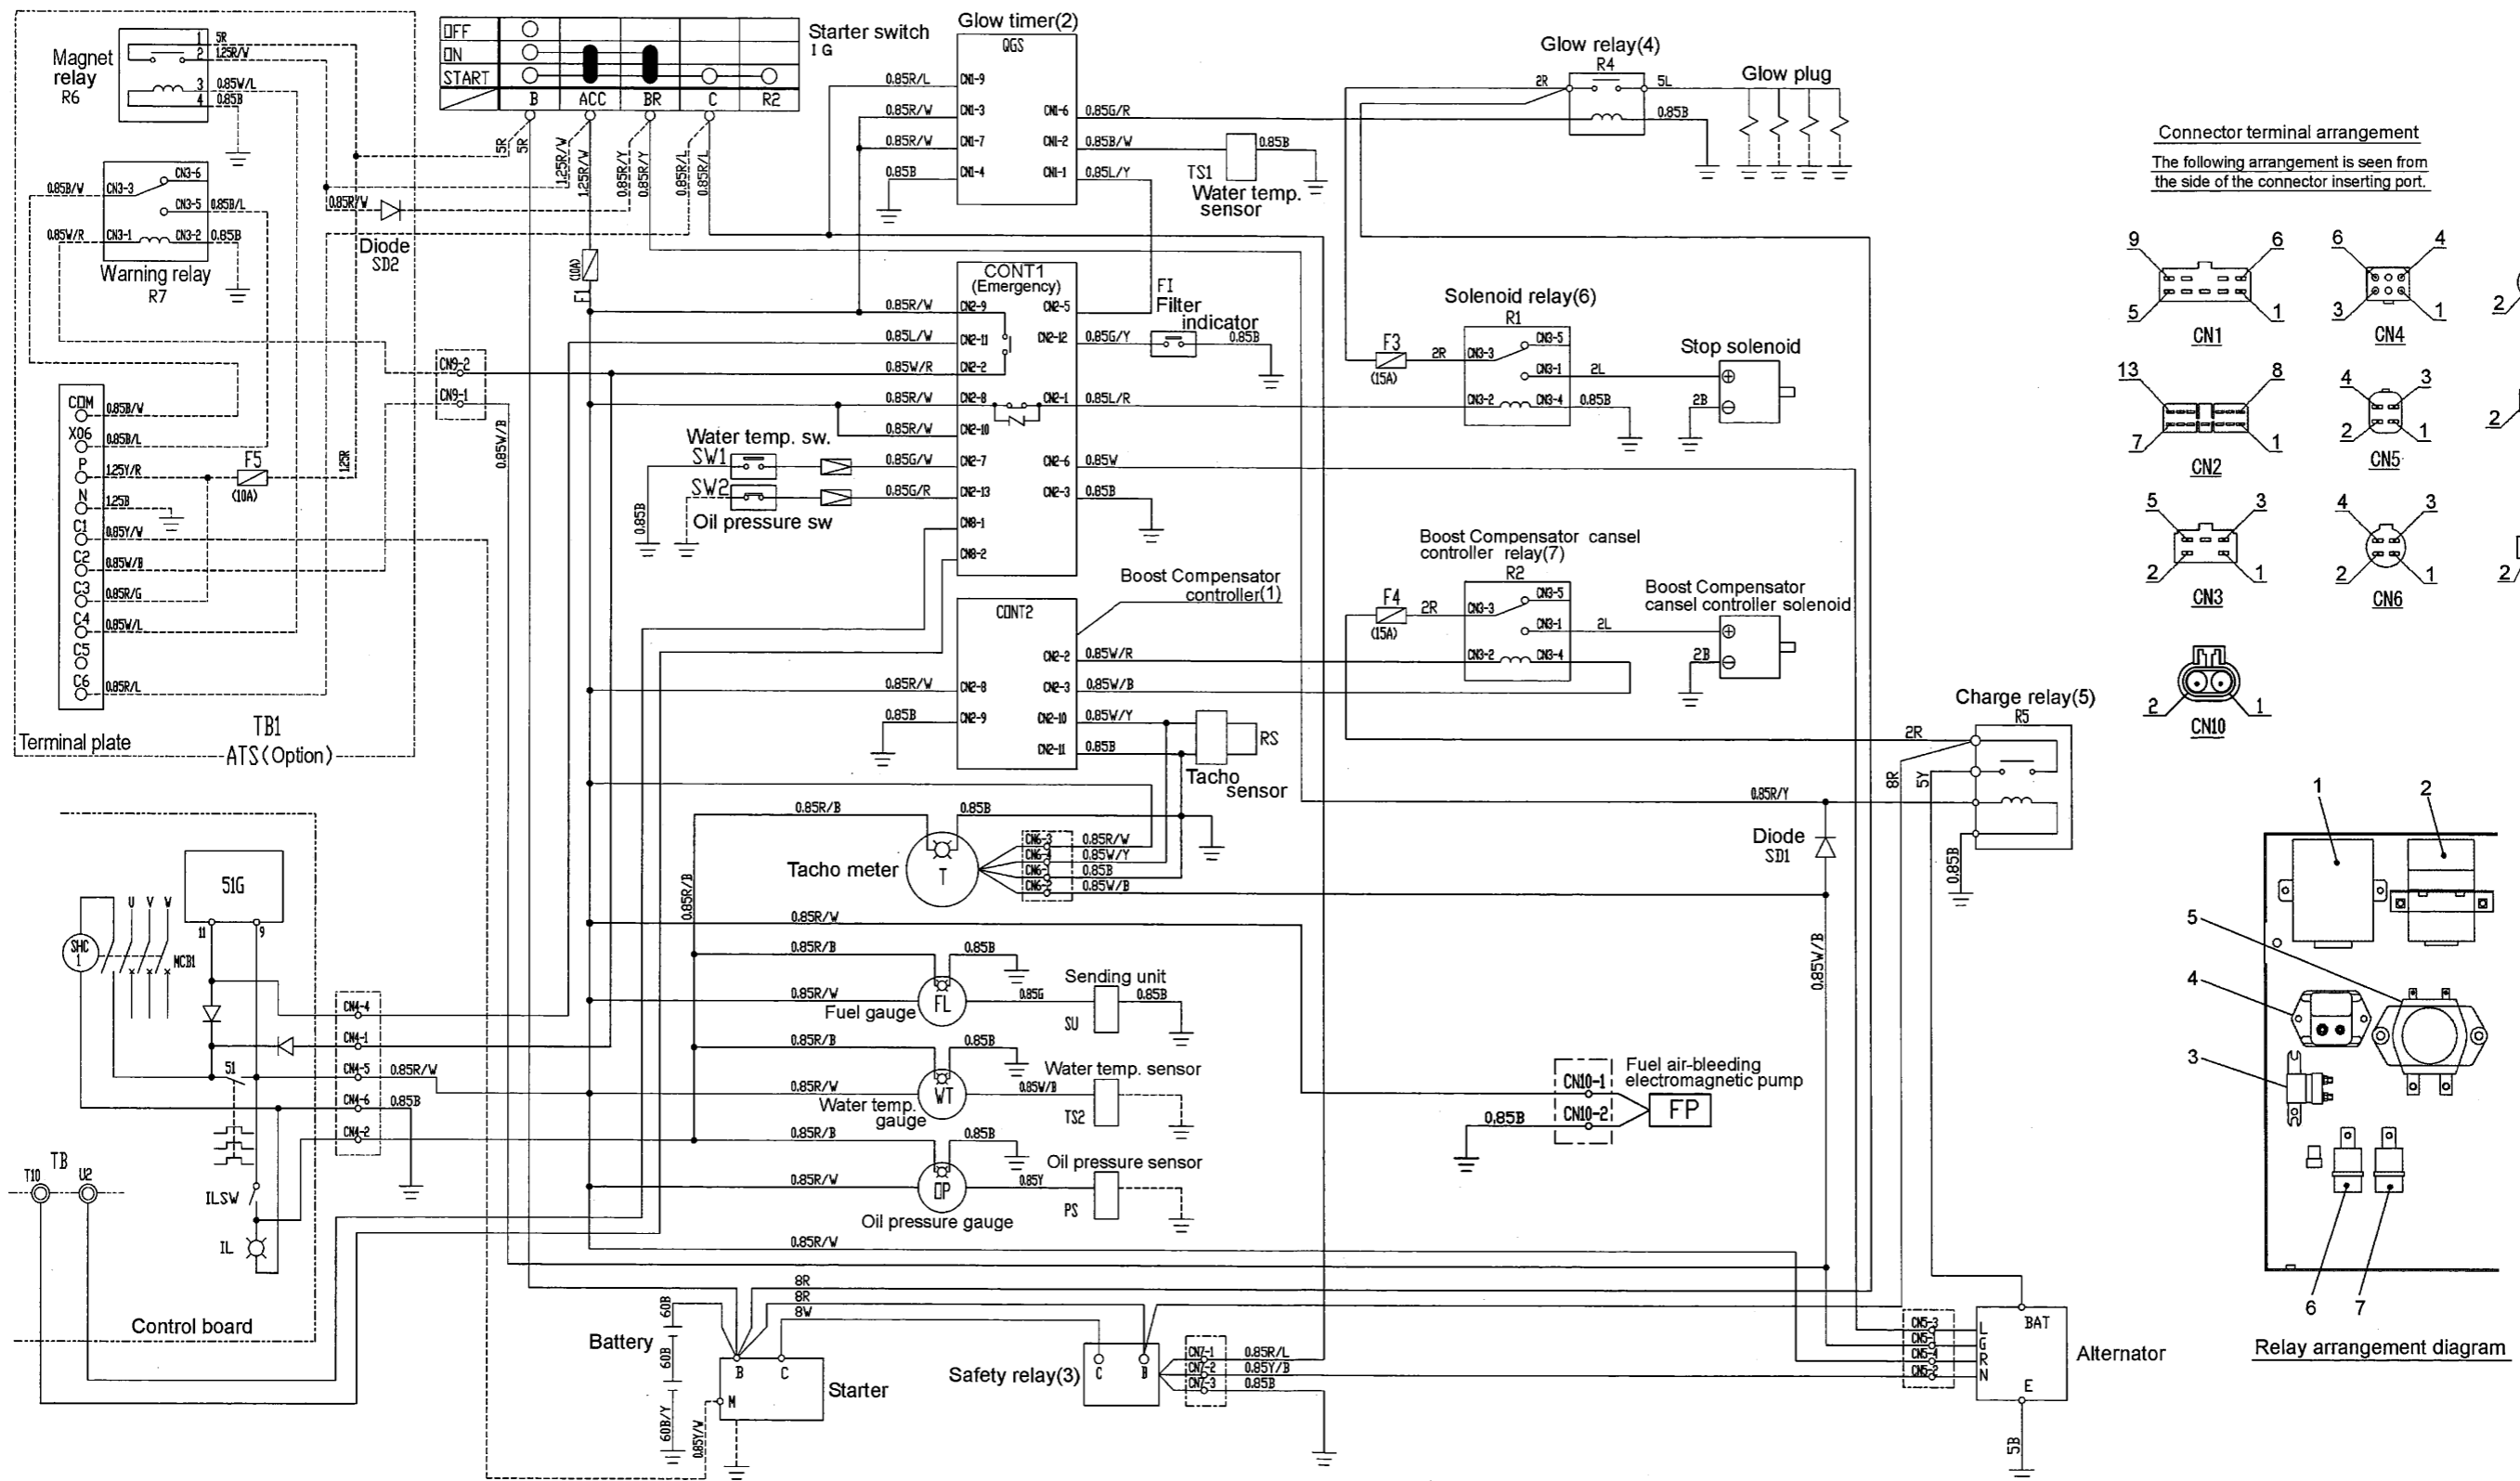



HOKUETSU INDUSTRIES CO., LTD.

8TH FLOOR SHINJUKU SAN-EI BLDG,
22-2 NISHI-SHINJUKU 1-CHOME, SHINJUKU-KU
TOKYO 160-0023 JAPAN
TEL:81-3-3348-7281
FAX:81-3-3348-7289
URL:<http://www.airman.co.jp>

Copyright (C) 2015 HOKUETSU INDUSTRIES CO., LTD. All Rights Reserved.

39600 74230

Printed DEC. 2015

AIRMAN
HOKUETSU INDUSTRIES CO., LTD.